


Fig 1

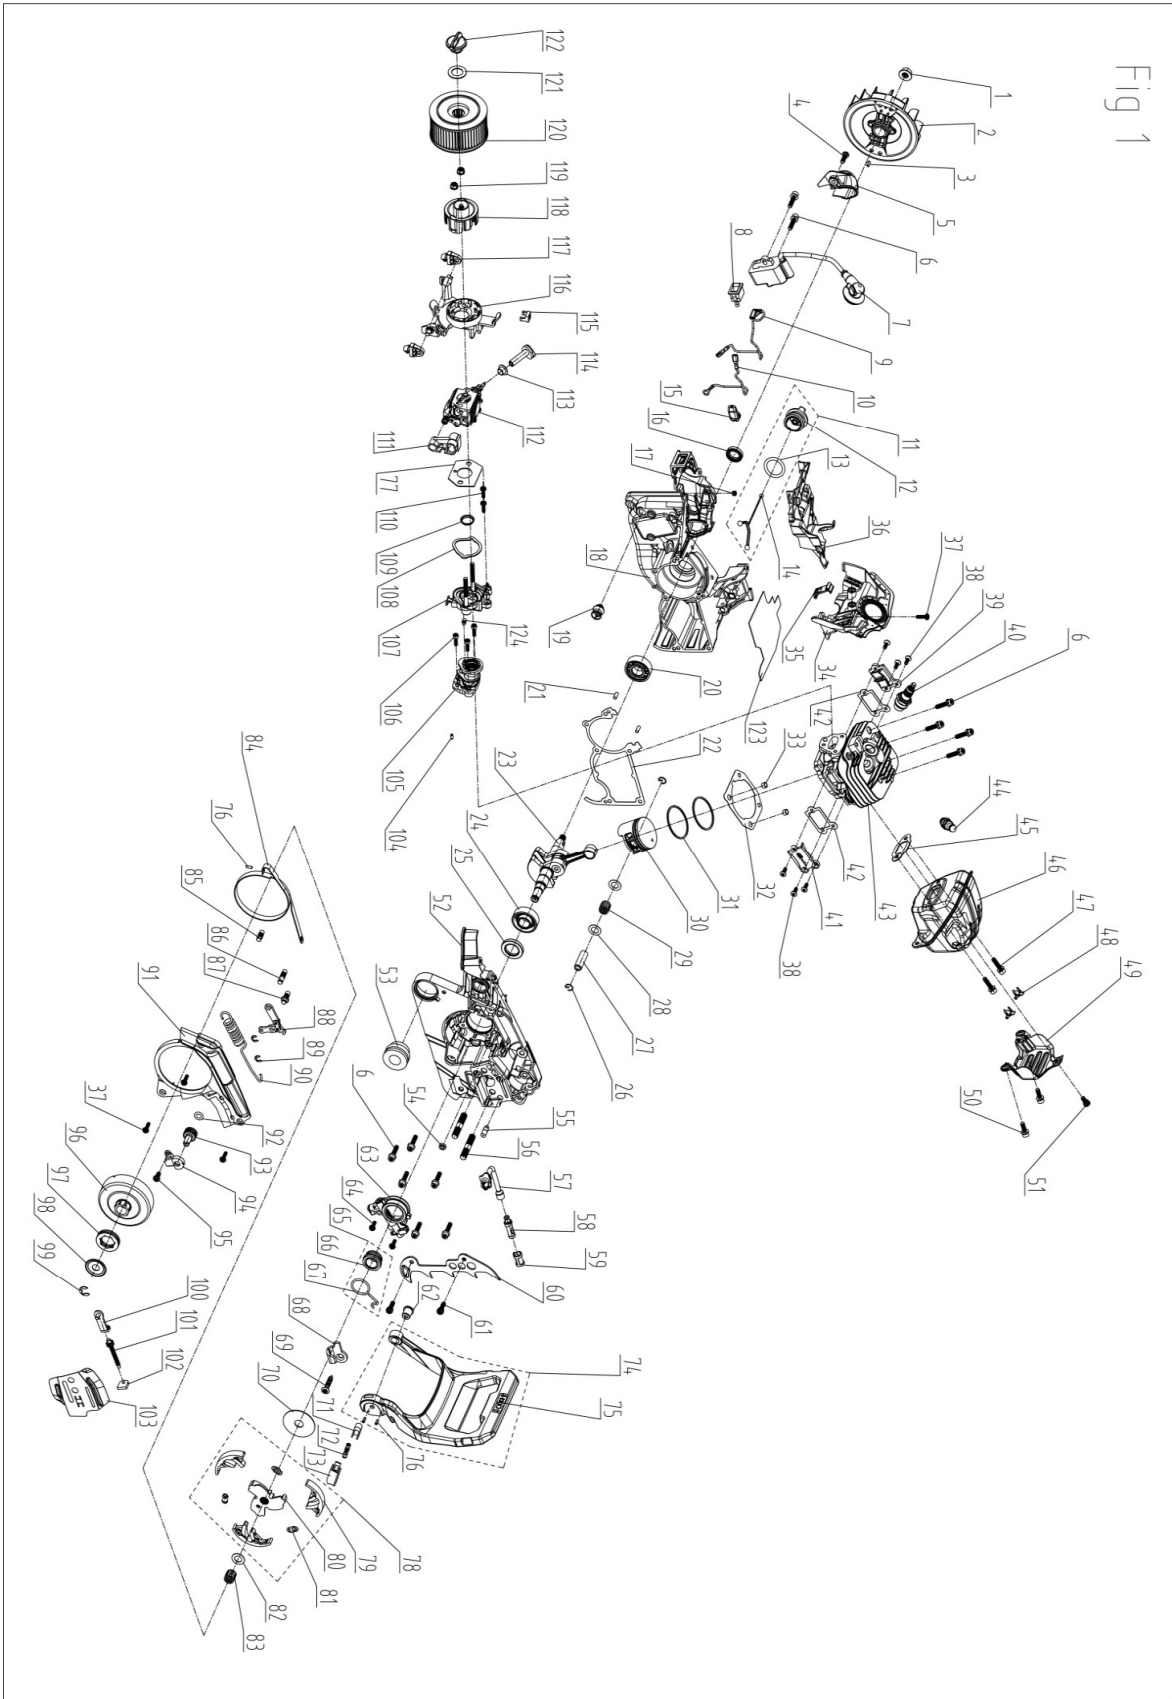

## Chenso 45


<b>FIG.1 Ghenso 45 Engine spare parts list</b>			
<b>NO</b>	<b>ART</b>	<b>NAME</b>	<b>QTY</b>
1	UNCH-0001	nut M8x1	1
2	UNCH-0002	flywheel	1
3	UNCH-0003	semicircular key	1
4	UNCH-0004	screw M5x14	1
5	UNCH-0005	flue pipe	1
6	UNCH-0006	screw M5x22	12
7	UNCH-0007	ignition coil	1
8	UNCH-0008	Engine stop switch	1
9	UNCH-0009	Flameout line	1
10	UNCH-0010	Ground lead	1
11	UNCH-0011	Oil filler cap element	1
12	UNCH-0012	Oil filler cap	1
13	UNCH-0013	Washer22.4x3.55	1
14	UNCH-0014	Fuel tank cap retainer	2
15	UNCH-0015	wire protective cover	1
16	UNCH-0016	Seal15x22x5	1
17	UNCH-0017	Throttle cable protective cover	1
18	UNCH-0018	Left crankcase	1
19	UNCH-0019	Anti-vibration washer	1
20	UNCH-0020	Bearing 6202	1
21	UNCH-0021	Cylinder pin $\phi$ 4x10	2
22	UNCH-0022	Seal washer	1
23	UNCH-0023	crankshaft	1
24	UNCH-0024	Bearing	1
25	UNCH-0025	right crankcase seal20x30x5	1
26	UNCH-0026	Piston pin spring	2
27	UNCH-0027	Piston pin	1
28	UNCH-0028	Retaining ring	2
29	UNCH-0029	Bearing $\phi$ 13x $\phi$ 10x12.5	1
30	UNCH-0030	Piston	1
31	UNCH-0031	Piston ring	2
32	UNCH-0032	Cylinder gasket	1
33	UNCH-0033	Locating sleeve	2
34	UNCH-0034	Upper damper	1
35	UNCH-0035	Winter and summer conversion board	1
36	UNCH-0036	Clapboard	1
37	UNCH-0037	ScrewM4*14	4
38	UNCH-0038	ScrewM4*12	6
39	UNCH-0039	Left scavenging cover	1
40	UNCH-0040	Spark plug	1
41	UNCH-0041	Right scavenging cover	1
42	UNCH-0042	Seal	2
43	UNCH-0043	Cylinder	1
44	UNCH-0044	Reducing valve	1
45	UNCH-0045	Silencer sealing plate	1
46	UNCH-0046	Silencer	1

## Chenso 45

47	UNCH-0047	Screw M5x20	2
48	UNCH-0048	pipe plug	2
49	UNCH-0049	Silencer cover	1
50	UNCH-0050	Screw M5x16	2
51	UNCH-0051	Screw M5x10	1
52	UNCH-0052	Right case body	1
53	UNCH-0053	Anti-vibration sponge	1
54	UNCH-0054	Oil seal	1
55	UNCH-0055	Oil tank vent	1
56	UNCH-0056	Bolt AYM8-M8x30-8.8	2
57	UNCH-0057	Oil pipe	1
58	UNCH-0058	Oil filter	1
59	UNCH-0059	Oil filter screen	1
60	UNCH-0060	bumper spikes unit	1
61	UNCH-0061	Screw M5x16	2
62	UNCH-0062	Support sleeve	1
63	UNCH-0063	Oil pump	1
64	UNCH-0037	Screw M4x12	2
65	UNCH-0064	Turbine unit	1
66	UNCH-0065	Turbine	1
67	UNCH-0066	Turbine lifting lever	1
68	UNCH-0067	Chain catcher	1
69	UNCH-0068	Tapping screw ST6.3x30	1
70	UNCH-0069	Clutch gasket	1
71	UNCH-0070	Reset device	1
72	UNCH-0071	Reset spring	1
73	UNCH-0072	Reset spring base	1
74	UNCH-0073	Front damper unit	1
75	UNCH-0074	Front damper	1
76	UNCH-0075	Brake strap locating pin $\phi 3 \times 8$	3
77	UNCH-0076	Carburetor sealing plate	
78	UNCH-0077	Clutch unit	1
79	UNCH-0078	Clutch shoe	3
80	UNCH-0079	Clutch retain frame	1
81	UNCH-0080	Clutch spring	3
82	UNCH-0081	Plain washer $\Phi 17.8 \times \Phi 10.1 \times 0.8$	1
83	UNCH-0082	needle bearing 10x14x13	1
84	UNCH-0083	Brake strap	1
85	UNCH-0084	Brake spring locating pin $\phi 3 \times 8$	1
86	UNCH-0085	Front damper locating pin	1
87	UNCH-0086	Hinge bar locating pin	1
88	UNCH-0087	Hinge bar	1
89	UNCH-0088	E spring $\phi 5$	2
90	UNCH-0089	Brake spring	1
91	UNCH-0090	Brake cover	1
92	UNCH-0091	Gear seal 6x2	1
93	UNCH-0092	Tensioner gear	1
94	UNCH-0093	Plastic briquetting block	1
95	UNCH-0051	Screw M5x10	1
96	UNCH-0094	Clutch shell	1

## Chenso 45

97	UNCH-0095	Chain wheel	1
98	UNCH-0096	Small anti abration plate	1
99	UNCH-0097	E spring $\phi 8$	1
100	UNCH-0098	Tension block	1
101	UNCH-0099	Tightener screw	1
102	UNCH-0100	Limited block	1
103	UNCH-0101	Guide pad	1
104	UNCH-0102	Liner	1
105	UNCH-0103	Air intake pipe	1
106	UNCH-0104	Screw M4*14	3
107	UNCH-0105	Carburetor base	1
108	UNCH-0106	Support pad	1
109	UNCH-0107	Retaining ring	1
110	UNCH-0108	Tapping screw ST4.2x14	2
111	UNCH-0109	Guide sleeve holder	1
112	UNCH-0110	Carburetor	1
113	UNCH-0111	Throttle base	1
114	UNCH-0112	Throttle rod	1
115	UNCH-0113	Limited block	1
116	UNCH-0114	Air intake base	1
117	UNCH-0115	Buffer	2
118	UNCH-0116	Air filter holder	1
119	UNCH-0001	Nut M5	2
120	UNCH-0117	Air filter	1
121	UNCH-0118	Rotary knob washer	1
122	UNCH-0119	Rotary knob	1
123	UNCH-0120	Case heat insulation flim	1
124	UNCH-0121	Plastic line	1

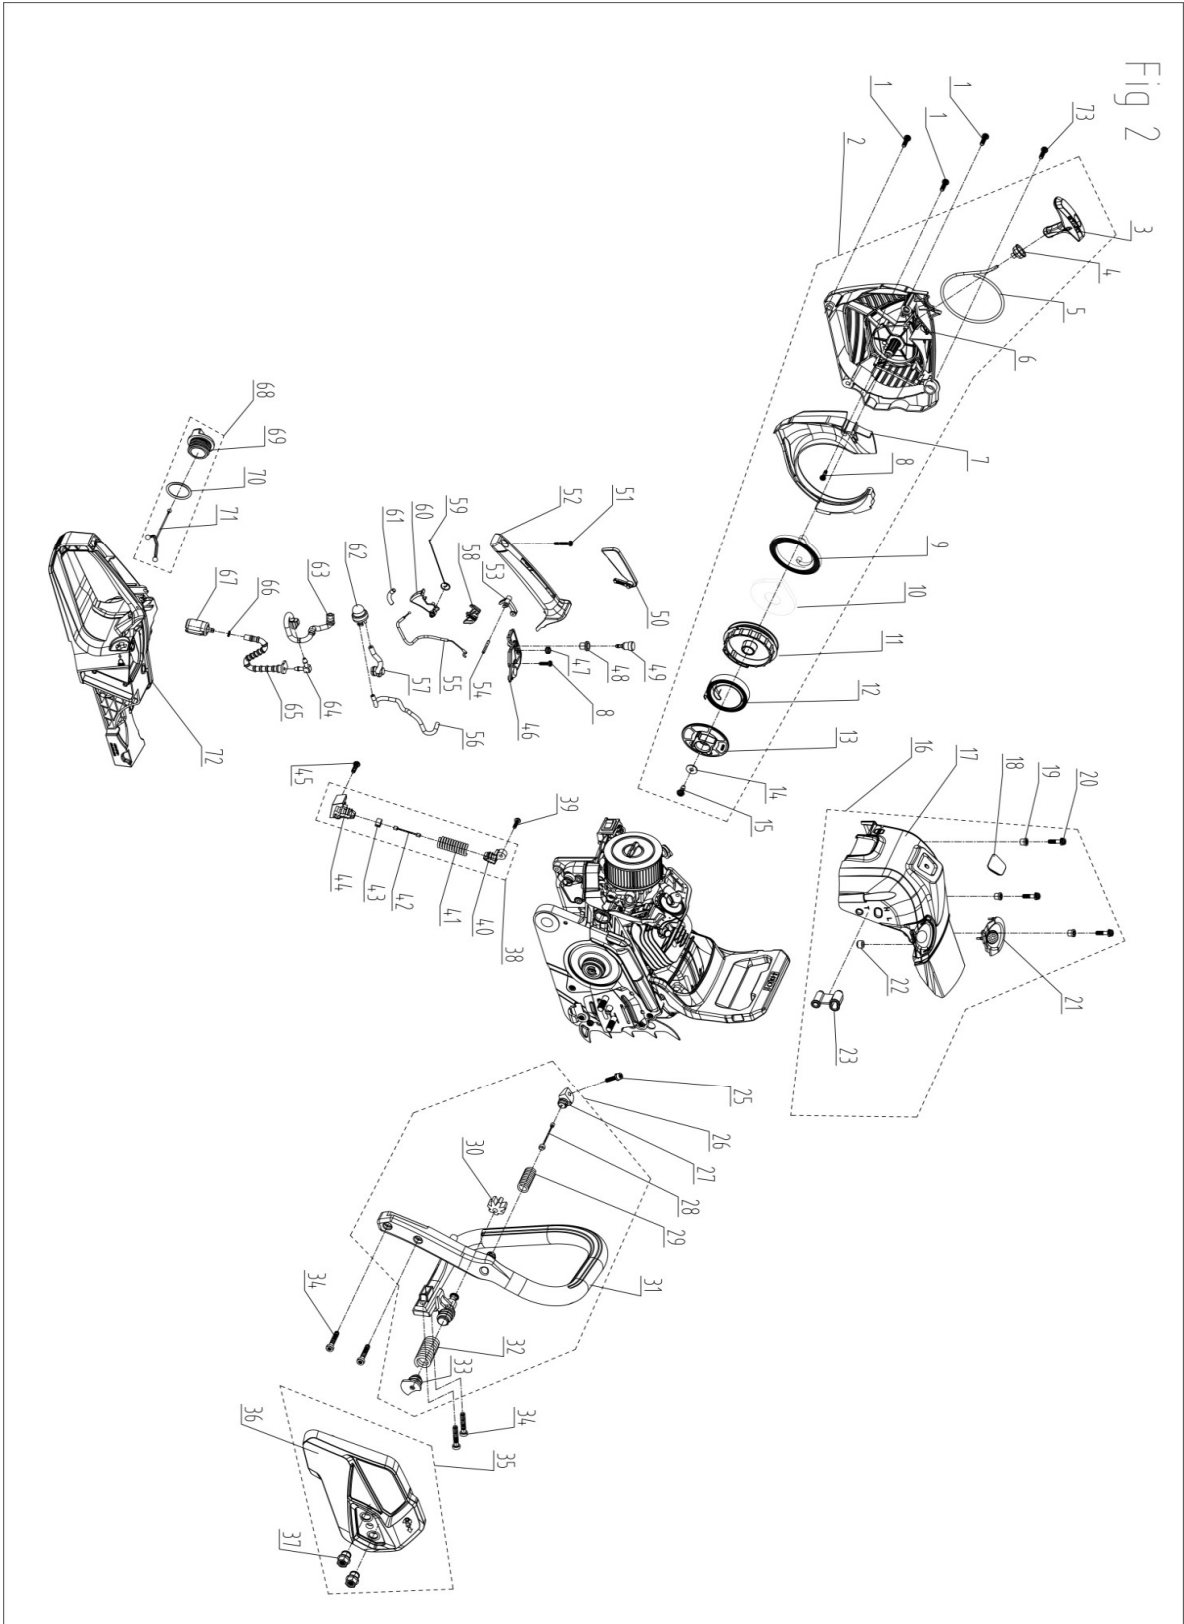

## Chenso 45

<b>FIG.2 Ghenso 45 Base spare parts list</b>			
<b>NO</b>	<b>ART</b>	<b>NAME</b>	<b>QTY</b>
1	UNCH-0061	Screw M5x16	3
2	UNCH-0122	Starter unit	1
3	UNCH-0123	Starter grip	1
4	UNCH-0124	Eyelet	1
5	UNCH-0125	Starter rope	1
6	UNCH-0126	Starter cover	1
7	UNCH-0127	Bossing	1
8	UNCH-0108	Tapping screw ST4.2x14	2
9	UNCH-0128	Start coil spring	1
10	UNCH-0129	Coil spring cover	1
11	UNCH-0130	Starter plate	1
12	UNCH-0131	Easy start-coil spring	1
13	UNCH-0132	Easy start-coil spring cover	1
14	UNCH-0133	Washer 5.2x15x1.5	1
15	UNCH-0134	Tapping screw ST5x14	1
16	UNCH-0135	Cover unit	1
17	UNCH-0136	Cover	1
18	UNCH-0137	Marking plate	1
19	UNCH-0138	Cover liner	3
20	UNCH-0139	Cover screw assy	3
21	UNCH-0140	reducing valve protective sheild	1
22	UNCH-0141	Anti vibration cap	1
23	UNCH-0142	Idling speed adjust guide sleeve	1
25	UNCH-0047	Screw M5x20	1
26	UNCH-0143	Handle unit	1
27	UNCH-0144	Anti vibration base3	1
28	UNCH-0145	Anti vibration rope3	1
29	UNCH-0146	Anti vibration spring3	1
30	UNCH-0147	Teeth shape sponge	1
31	UNCH-0148	Handle	1
32	UNCH-0149	Anti vibration spring1	1
33	UNCH-0150	Anti vibration base1	1
34	UNCH-0151	Tapping screw ST6.3x32	4
35	UNCH-0152	Right side cover unit	1
36	UNCH-0153	Right side cover	1
37	UNCH-0154	Nut	2
38	UNCH-0155	Anti vibration 2 assy	1
39	UNCH-0037	Screw M4x14	1
40	UNCH-0156	Upper anti vibration base 2	1
41	UNCH-0157	Anti vibration spring2	1
42	UNCH-0145	Anti vibration rope2	1
43	UNCH-0158	Rope sponge	1
44	UNCH-0159	lower anti vibration base 2	1
45	UNCH-0160	Tapping screw ST4.8x16	1
46	UNCH-0161	Base cover plate	1
47	UNCH-0162	oil pump pipe protective sleeve	1
48	UNCH-0163	Balancer seat	1

## Chenso 45

49	UNCH-0164	Balancer body unit	1
50	UNCH-0165	Trigger control rack	1
51	UNCH-0166	Tapping screw ST4.2x22	1
52	UNCH-0167	Hander cover	1
53	UNCH-0168	Limited block	1
54	UNCH-0169	Cylinder pin $\phi 3 \times 25$	1
55	UNCH-0170	Cable accelerator	1
56	UNCH-0171	Oil pump pipe	1
57	UNCH-0172	Long oil nozzle	1
58	UNCH-0173	Limited block	1
59	UNCH-0174	Trigger spring	1
60	UNCH-0175	Trigger	1
61	UNCH-0176	Guide pipe	1
62	UNCH-0177	Oil bubble	1
63	UNCH-0178	Upper fuel pipe	1
64	UNCH-0179	Fuel throttle	1
65	UNCH-0180	Lower fuel pipe	1
66	UNCH-0181	Spring	1
67	UNCH-0182	Fuel filter unit	1
68	UNCH-0183	Fuel throttle cap unit	1
69	UNCH-0184	Fuel throttle cap	1
70	UNCH-0185	O ring 24.7x3.55	1
71	UNCH-0014	Anti-drop plate	1
72	UNCH-0186	Base	1
73	UNCH-0187	Support Screw M5x16	1