

Иллюстрация Illustrated parts list

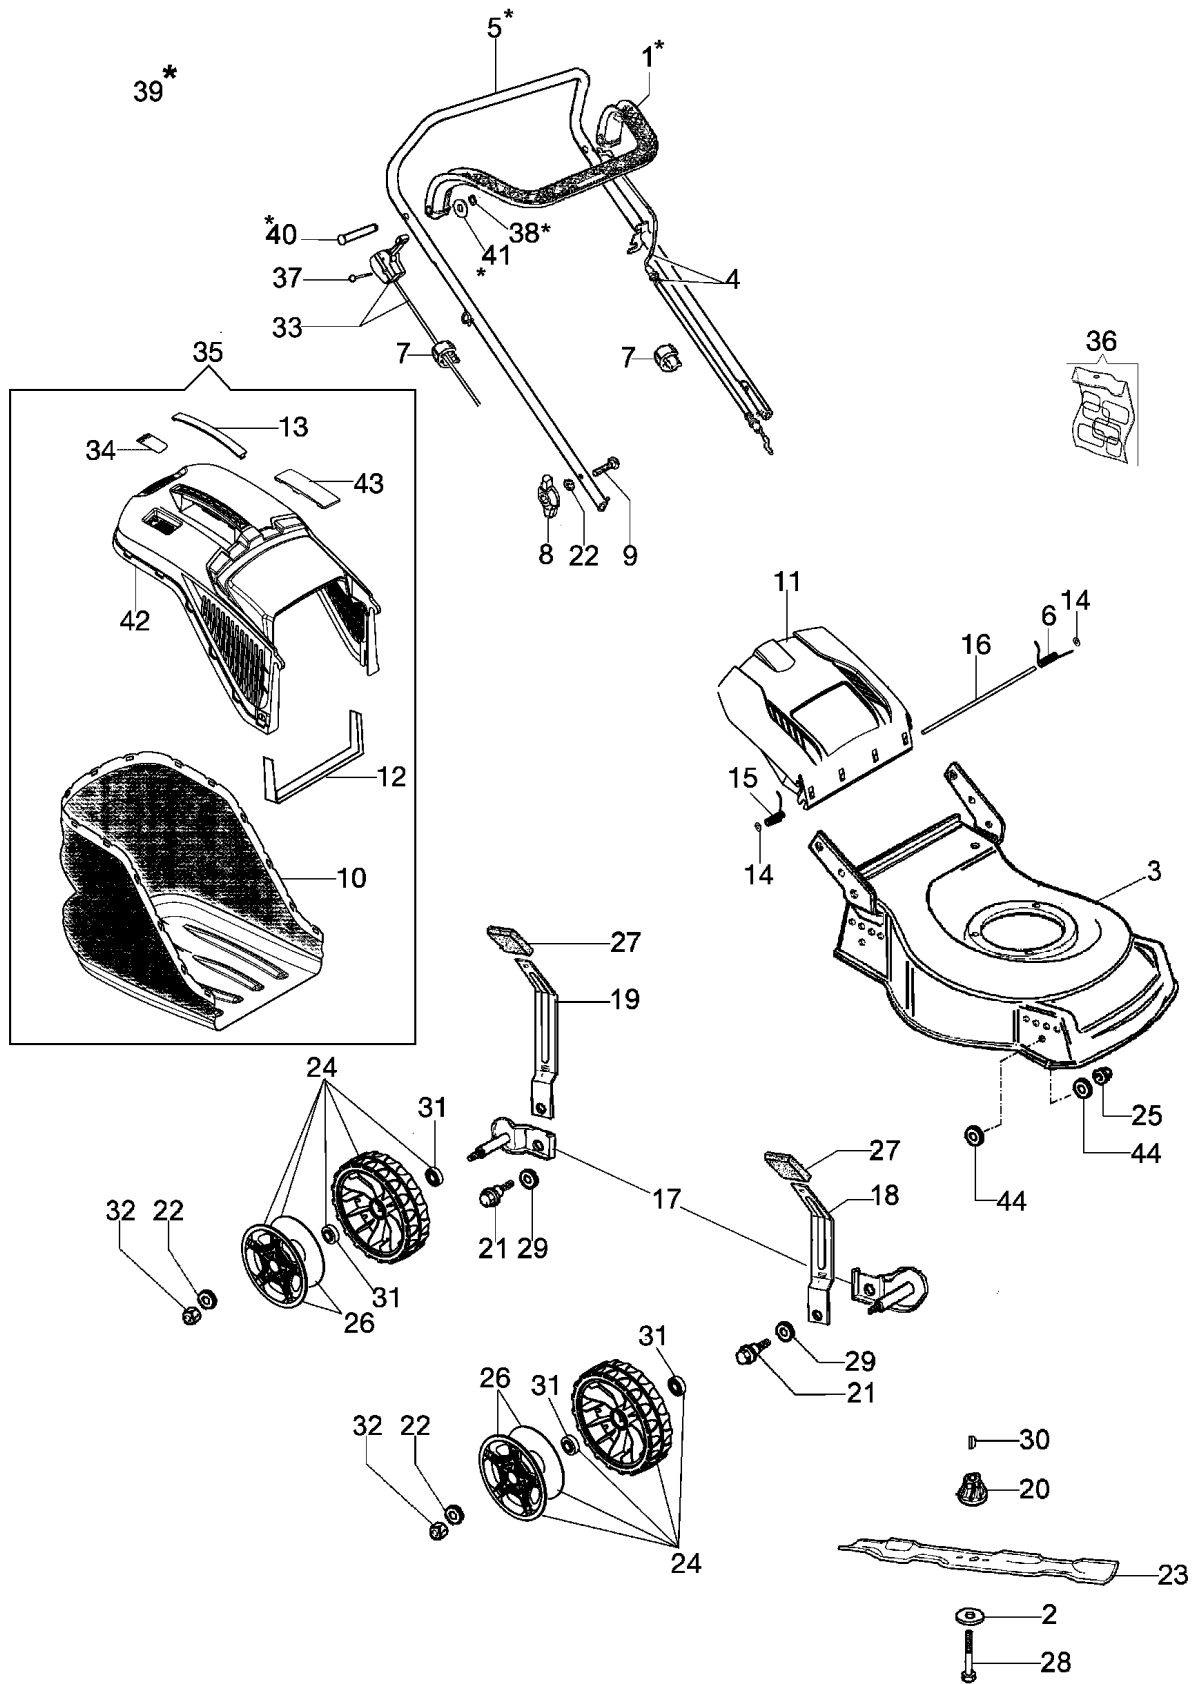 


Иллюстрация Illustrated parts list

Ссылка	Кол-во	Код артикула	Наименование
1	1	66060316AR	Brake lever
2	1	66060384R	Washer
3	1	66100010AR	Deck
4	1	66060108R	Engine break cable
5	1	66060421BR	Handle
6	1	66110493R	Spring
7	2	66060231	Band
8	2	66070317R	Tightening handle
9	2	3910015R	Screw
10	1	66070457R	Grassbag
11	1	66070519R	Cover
12	1	66070133R	Support
13	1	66070523R	Case cover
14	2	3045034R	Retainer washer
15	1	66110494R	Spring
16	1	66110026R	Deflector axle
17	2	66070301A	Support set
18	2	66070248R	Lever
19	2	66070031R	Lever
20	1	66030003AR	Hub
21	4	66070030A	Pin
22	6	66030012R	Washer
23	1	66100044R	Blade
24	4	66070624	Wheel kit
25	4	3933032R	Nut
26	4	66070572R	Wheel cover
27	4	66070021R	Handle
28	1	3906150R	Screw
29	8	3027001R	Washer
30	1	8202126R	Key
31	8	66030081R	Bearing
32	4	3914010R	Nut
33	1	66060164BR	Compl. throttle
34	1	66070521R	Shutter
35	1	66070630	Grassbag kit
36	1	66070628	Labels set
37	1	3910019	Screw
38	2	3024006	Snap ring
39	1	66060425R	Handle kit
40	2	66060317AR	Pin
41	2	3064037	Washer
42	1	66070453R	Frame
43	1	66070466R	Lock
44	8	66030012R	Washer

Иллюстрация Cylinder head and valve

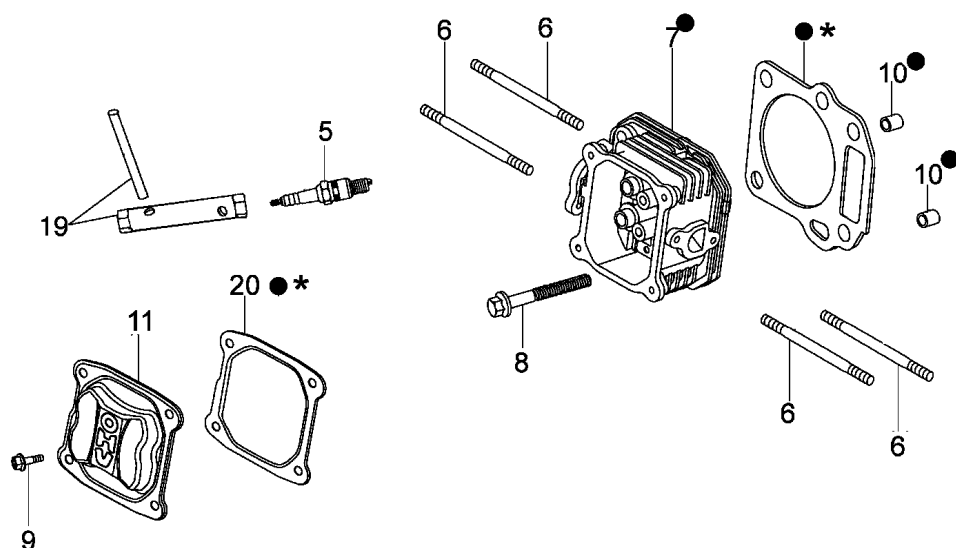 
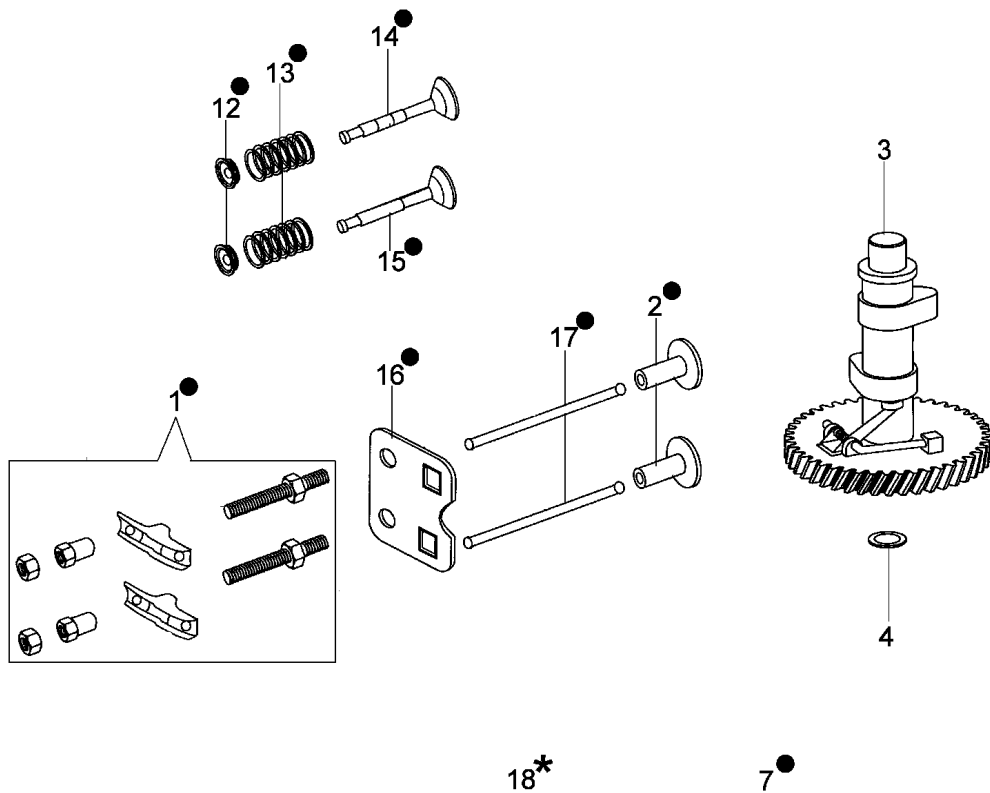 


Иллюстрация Cylinder head and valve

Ссылка	Кол-во	Код артикула	Наименование
1	2	L66150368	Rocker arm
2	2	L66150403	Slide
3	1	L66150404	Camshaft Assy
4	1	L66150399	Washer
5	1	3055123	Spark plug
6	4	L66150396	Stud
7	1	L66150215	Head comp.cylinder
8	4	L66150005	Screw
9	4	L66150393	Screw
10	2	L66150350	Pin
11	1	L66150394	Shutter
12	2	L66150398	Spring holder
13	2	L66150366	Spring Valve
14	1	L66150091	Intake valve
15	1	L66150400	Intake valve
16	1	L66150401	Plate
17	2	L66150402	Equalizer rod
18	1	L66150227	Gasket set
19	1	66060414	19 x 21 mm wrench
20	1	L66150471	Oil seal

Иллюстрация Cylinder and crankcase

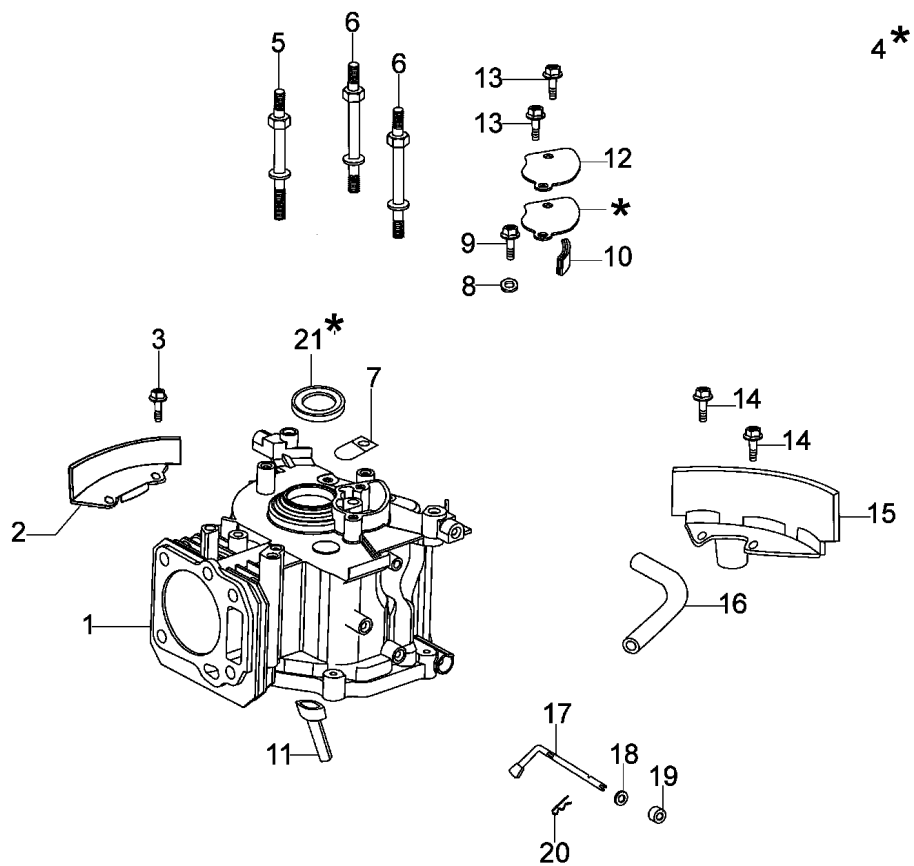 


Иллюстрация Cylinder and crankcase

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150224	Crank case comp.
2	1	L66150406	Shield,tank side
3	2	L66150464	Screws
4	1	L66150227	Gasket set
5	1	L66150407	Stud
6	2	L66150408	Stud
7	1	L66150410	Reed valve
8	1	L66150035	Washer
9	1	L66150411	Screws
10	1	L66150023	Filter,breather
11	1	L66150232	Packing, breather chamber
12	1	L66150413	Cap
13	2	L66150414	Screws
14	2	L66150316	Screw
15	1	L66150031	Guard
16	1	L66150229	Hose
17	1	L66150417	Shaft,governor arm
18	1	L66150035	Washer
19	1	L66150419	Oil seal
20	1	L66150353	Pin
21	1	L66150409	Sealing ring

Иллюстрация Crankcase cover

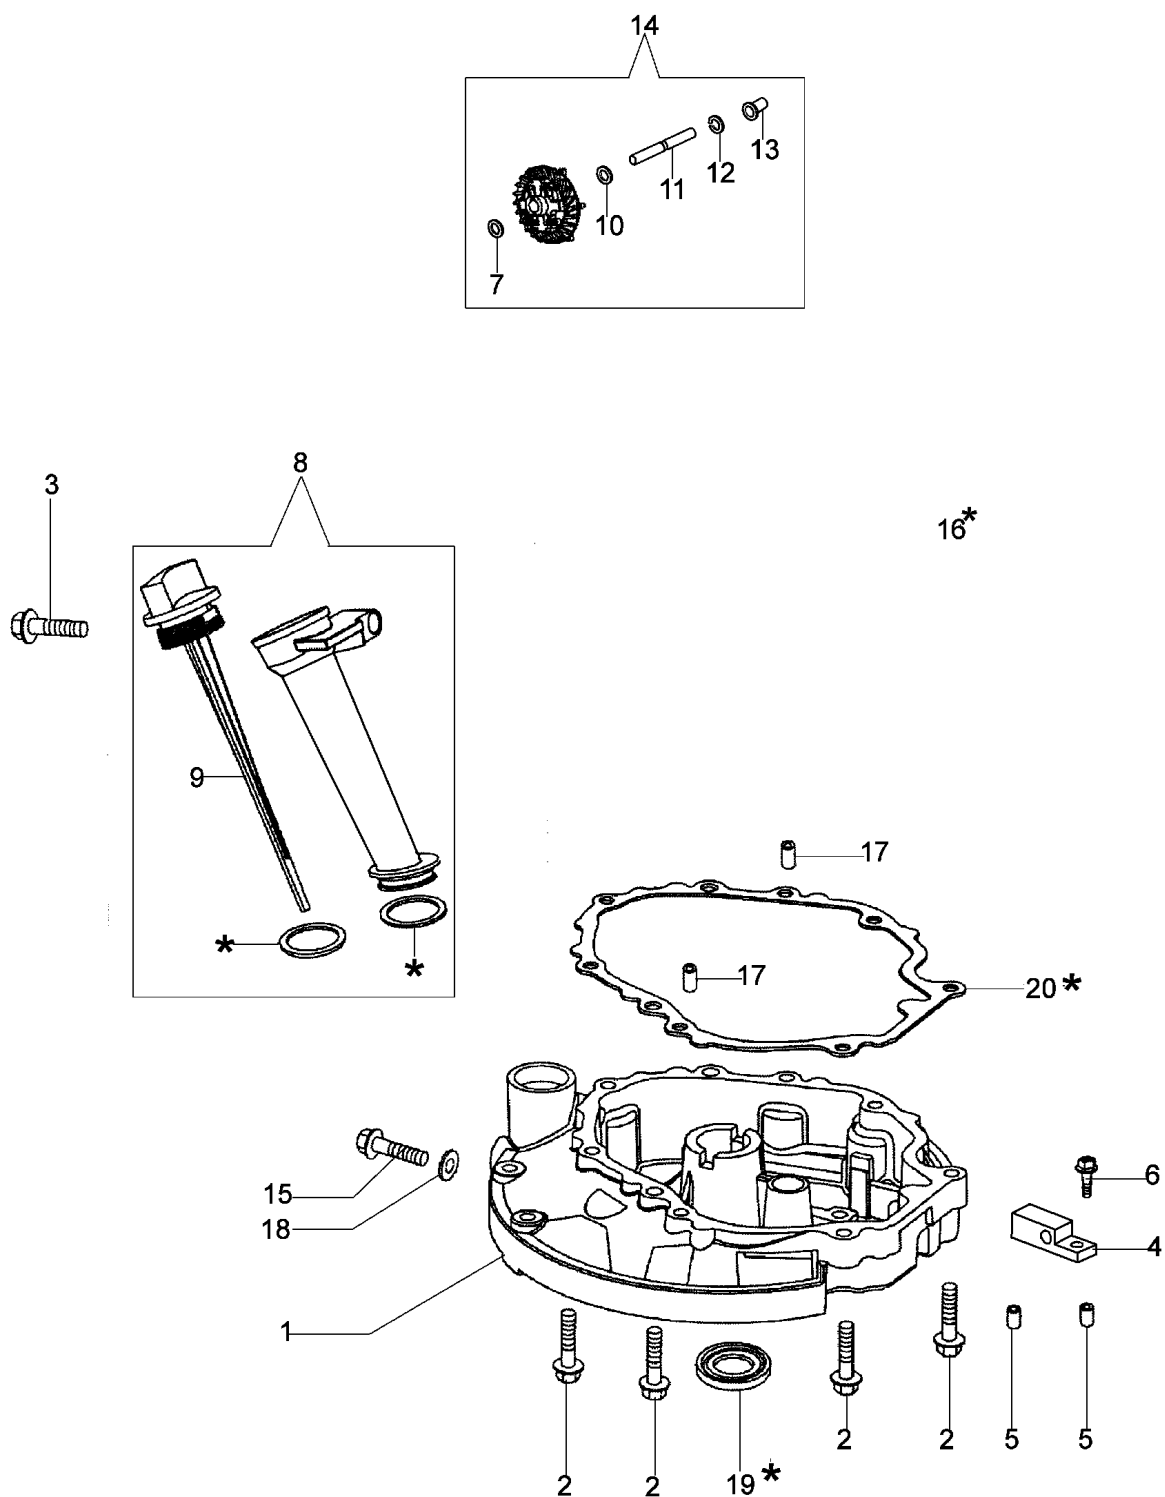 


Иллюстрация Crankcase cover

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150230	Cover
2	7	L66150452	Screw
3	3	L66150453	Screw
4	1	L66150454	Plate,governor holder
5	2	L66150455	Bushing
6	1	L66150456	Screw
7	1	L66150035	Washer
8	1	L66150458	Cap assy
9	1	L66150067	Oil cap
10	1	L66150053	Washer
11	1	L66150054	Shaft,governor
12	1	L66150304	Governor
13	1	L66150304	Governor
14	1	L66150457	Governor
15	1	L66150352	Screw
16	1	L66150227	Gasket set
17	2	L66150357	Pin
18	1	L66150354	Washer
19	1	L66150462	Oil seal
20	1	L66150463	Oil seal

Иллюстрация Crankshaft and piston

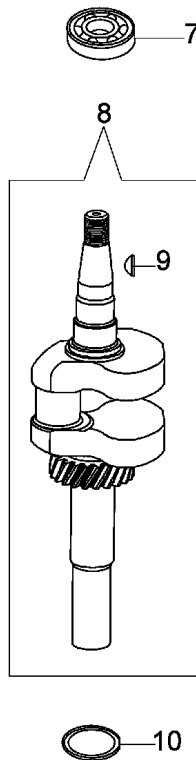 
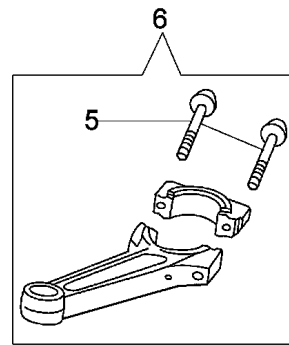 
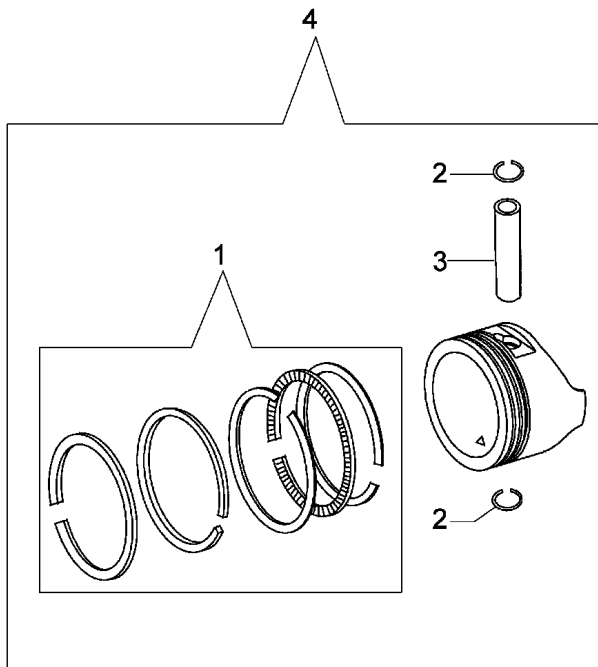 


Иллюстрация Crankshaft and piston

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150070	Piston ring set
2	2	L66150372	Retainer washer
3	1	L66150342	Piston pin
4	1	L66150217A	Piston assy
5	2	L66150078	Bolt,connecting rod
6	1	L66150421	Connecting rod cpl.
7	1	L66150355	Bearing
8	1	L66150423	Crankshaft
9	1	L66150081	Key
10	1	L66150424	Washer

Иллюстрация Starter assy and flywheel

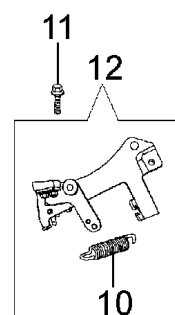 
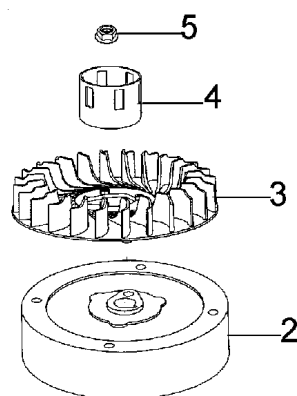 
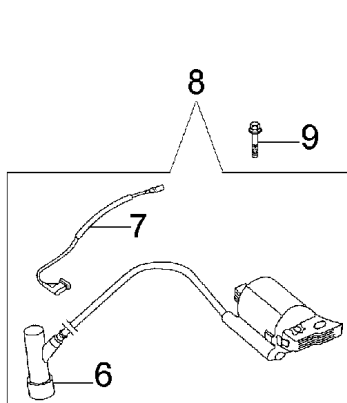 
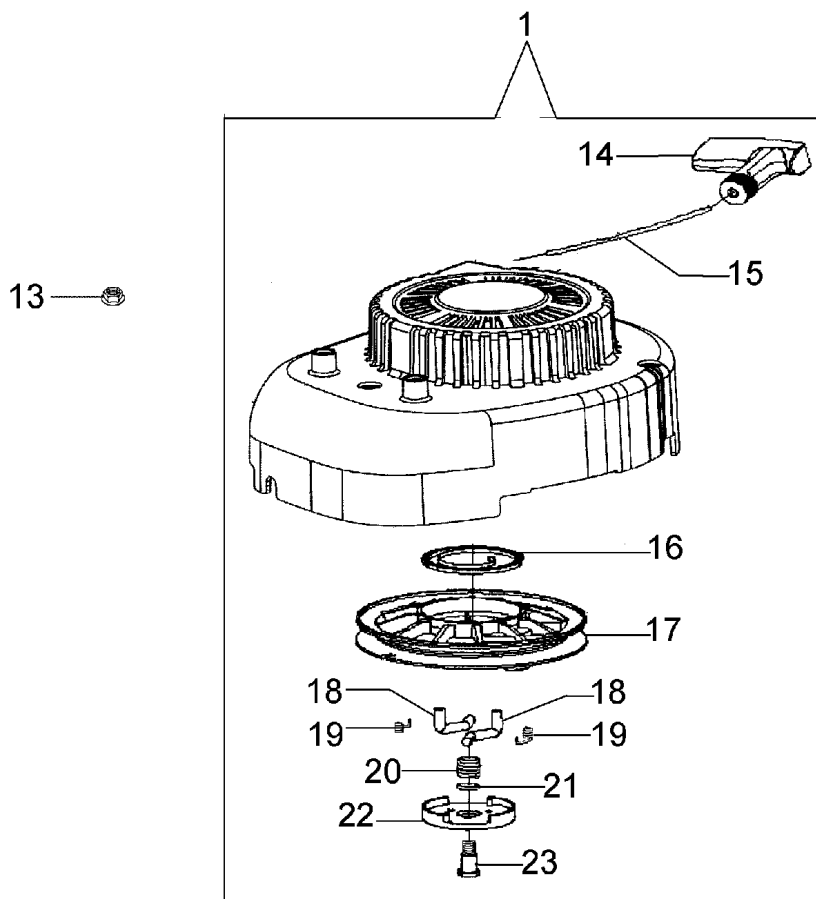 


Иллюстрация Starter assy and flywheel

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150233	Starter assy
2	1	L66150425	Flywheel
3	1	L66150426	Fan,cooling
4	1	L66150147	Pulley
5	1	L66150376	Nut,flange
6	1	L66150427	Spark plug cap
7	1	L66150150	Wire,stopping engine
8	1	L66150429	Ignition coil
9	1	L66150416	Screws
10	1	L66150257	Spring (brake)
11	2	L66150416	Screws
12	1	L66150415	Flyweheel brake
13	1	L66150113	Nut
14	1	L66150270	Knob,recoil starter
15	1	L66150269	Starter rope
16	1	L66150266	Spring,recoil starter
17	1	L66150265	Pulley
18	2	L66150263	Pawl
19	2	L66150264	Spring
20	1	L66150262	Spring
21	1	L66150261	Washer
22	1	L66150260	Slide
23	1	L66150259	Screws

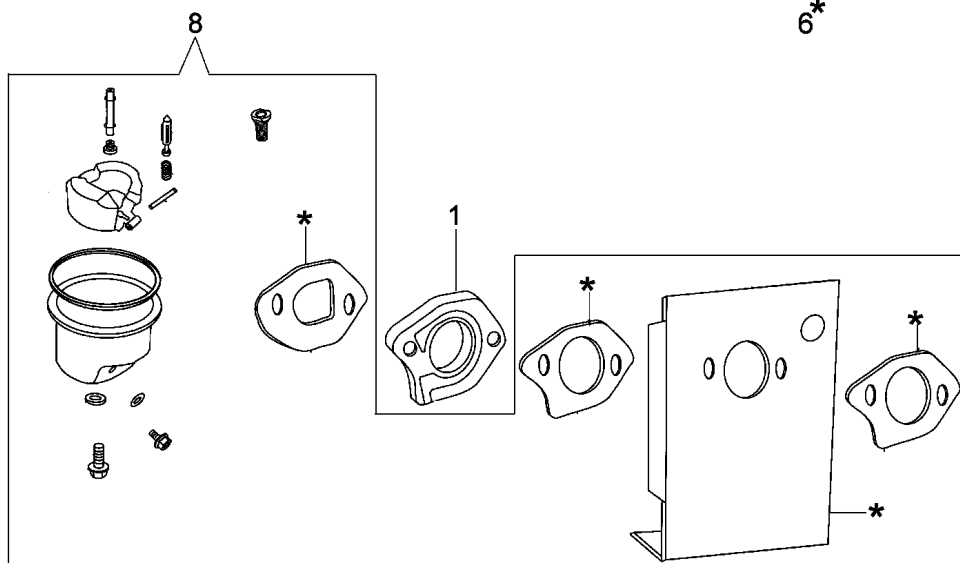 
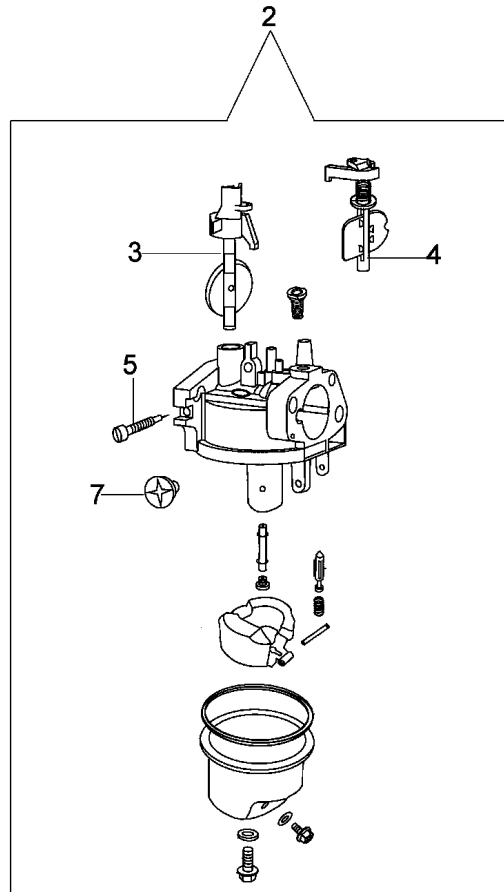 


Иллюстрация Carburettor

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150433	Insulator
2	1	L66150142A	Carburetor
3		-	Not available for this product
4	1	L66150135	Air lever
5		-	Not available for this product
6	1	L66150227	Gasket set
7		-	Not available for this product
8	1	L66150211	Repair kit

Иллюстрация Air filter and muffler

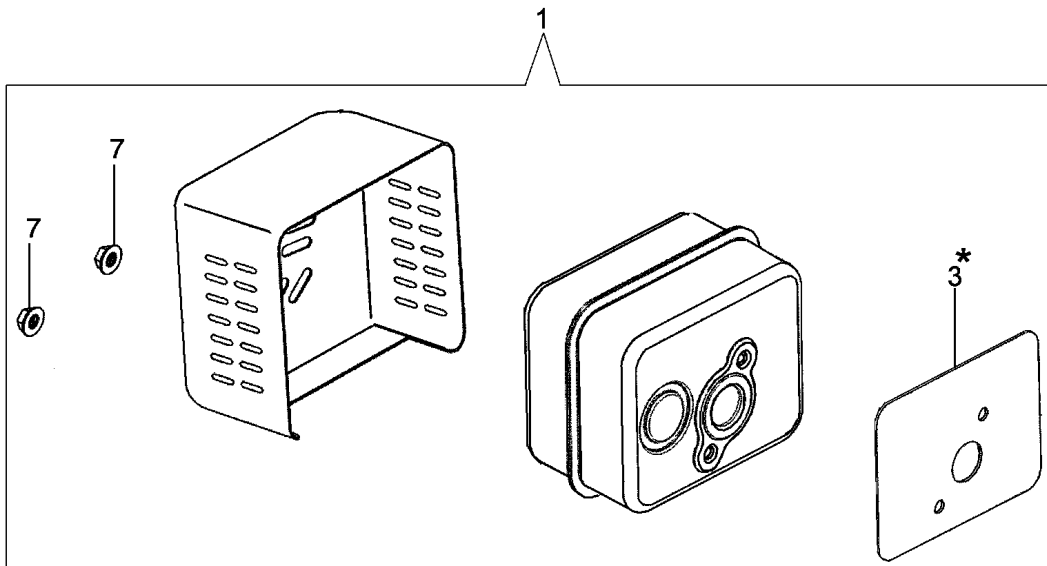 
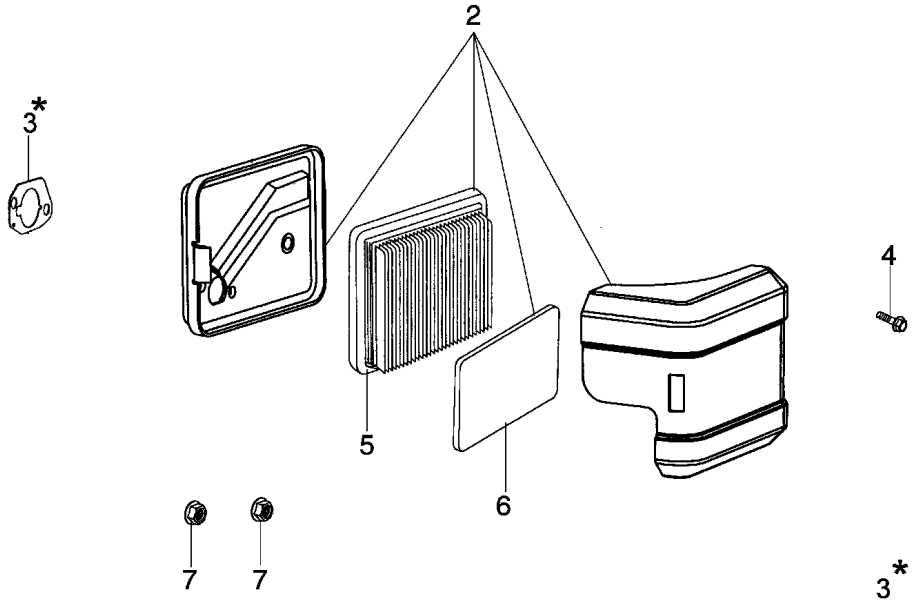 


Иллюстрация Air filter and muffler

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150443	Muffler assy.
2	1	L66150250	Air filter kit
3	1	L66150227	Gasket set
4	2	L66150251	Screw
5	1	L66150445	Air filter
6	1	L66150255	Sponge
7	1	L66150185	Nut

Иллюстрация Control lever

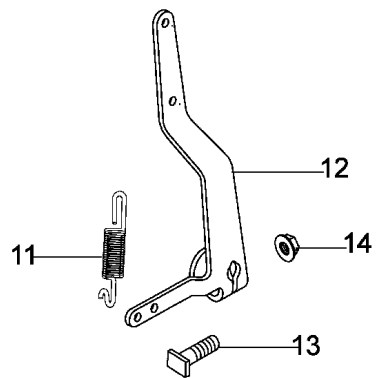 
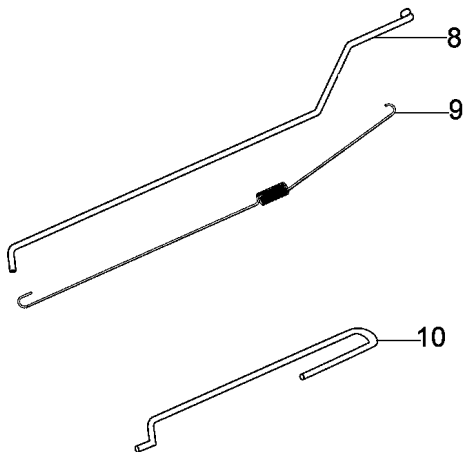 
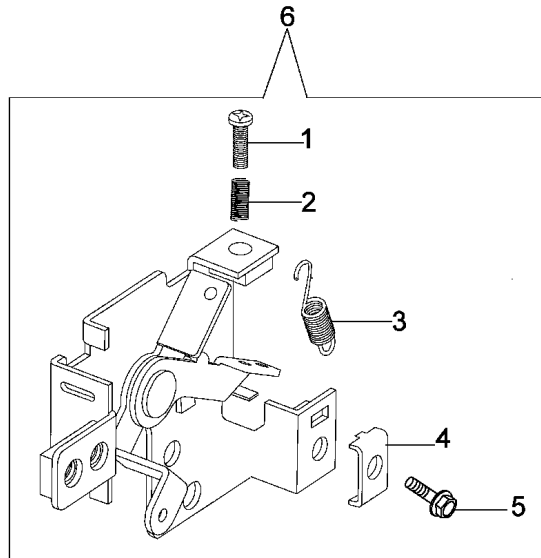 


Иллюстрация Control lever

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150168	Screw, control adjusting
2	1	L66150169	Spring
3	1	L66150170	Spring
4	1	L66150468	Plate
5	1	L66150172	Bolt m5x16
6	1	L66150470	Complete lever
7	2	L66150464	Screws
8	1	L66150236	Rod
9	1	L66150237	Spring
10	1	L66150461	Throttle rod
11	1	L66150448	Spring
12	1	L66150447	Control lever
13	1	L66150382	Bolt, flange
14	1	L66150185	Nut

Иллюстрация Fuel tank and cover

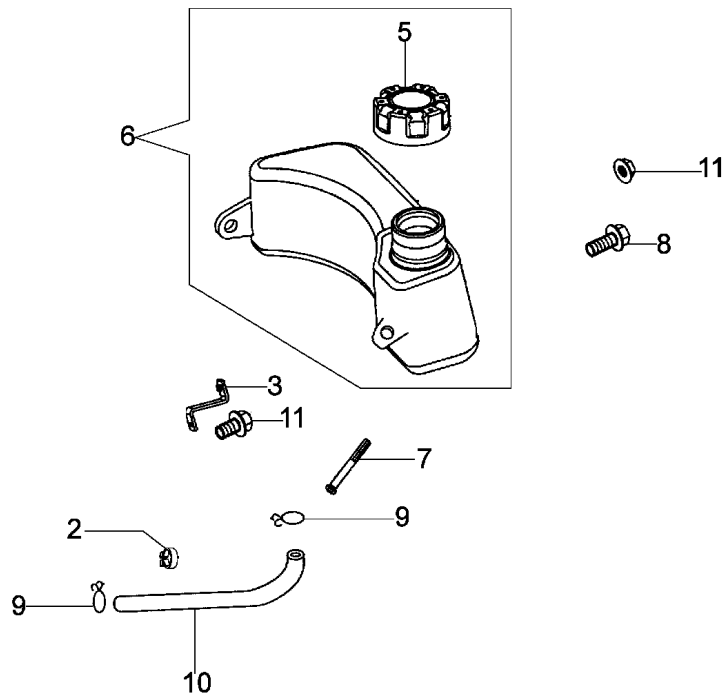 
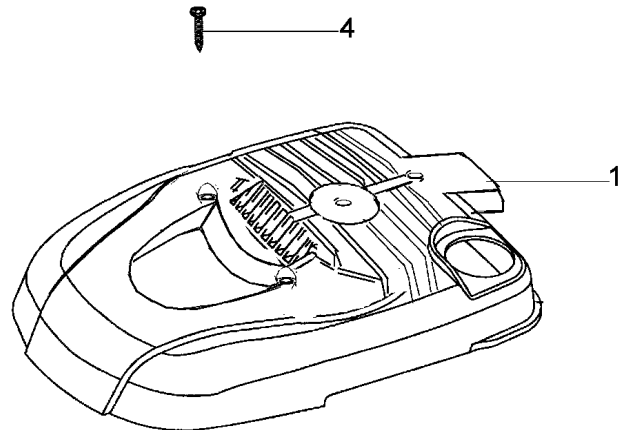 


Иллюстрация Fuel tank and cover

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150234	Cover
2	1	L66150440	Clip
3	1	L66150239	Stud
4	1	L66150240	Screw
5	1	L66150437	Plug
6	1	L66150238	Fuel tank
7	1	L66150439	Filter
8	1	L66150197	Screw
9	2	L66150435	Clip
10	1	L66150432	Tube
11	1	L66150464	Screws