





MA175/MA190

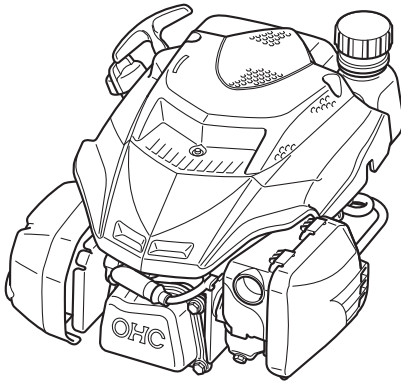

<i>INSTRUCTIONS FOR USE</i>	Original	EN
<i>INSTRUCTIONS FOR USE (USA only)</i>		US
<i>MANUEL D'UTILISATION</i>		FR
<i>BEDIENUNGSANLEITUNG</i>		DE
<i>MANUAL DE INSTRUCCIONES</i>		ES
<i>MANUALE D'USO E MANUTENZIONE</i>		IT
<i>MANUAL DE INSTRUÇÕES</i>		PT
<i>ΟΔΗΓΙΕΣ ΧΡΗΣΕΩΣ ΚΑΙ ΣΥΝΤΗΡΗΣΕΩΣ ΚΙΝΗΤΗΡΩΝ</i>		GR
<i>РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ</i>		RU
<i>使用说明书</i>		CN



MA175

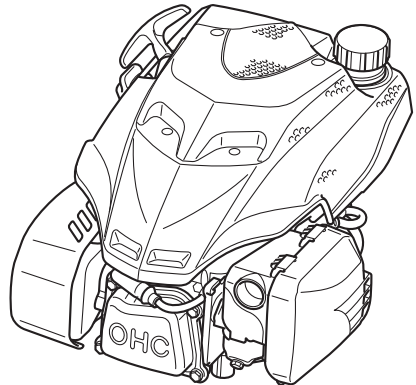

MA190

7EC-F8199-U1

OHC Gasoline Engines

FOREWORD

Thank you very much for purchasing a **YAMAHA ENGINE**.

Your **YAMAHA ENGINE** can supply the power to operate various sorts of machines and equipment.

Please take a moment to familiarize yourself with the proper operation and maintenance procedures in order to maximize the safe and efficient use of this product.

Keep this owner's manual at hand, so that you can refer to it at any time.

Due to constant efforts to improve our products, certain procedures and specifications are subject to change without notice.

When ordering spare parts, always give us the MODEL, PRODUCTION NUMBER and SERIAL NUMBER of your engine.


Please fill in the following blanks after checking the production number on your engine.

(Location of label is different depending on the engine specification.)

EN

NOTICE

The engine which is complied with the emission regulation of USA, Europe, and China has the emission control label placed on the engine according to each country's regulation.
Exporting any engine to these countries/regions which does not have the emission control label is a violation and subject to penalty.

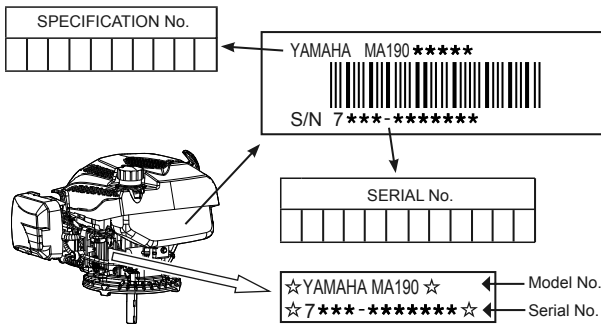

CONTENTS

	Page
1. SAFETY PRECAUTIONS	2
2. COMPONENTS	4
3. PRE-OPERATION CHECKS	5
4. OPERATING	6
CHOKING SYSTEM	6
TYPE 1: Cable choke control	6
TYPE 2: Manual choke	8
TYPE 3: Auto choke	10
TYPE 4: Primer bulb	12
5. MAINTENANCE	15
6. PREPARATIONS FOR STORAGE	18
7. SPARK ARRESTER (OPTIONAL)	18
8. EASY TROUBLESHOOTING	19
9. SPECIFICATIONS	20

1. SAFETY PRECAUTIONS


Please make sure you review each precaution carefully.
Pay special attention to statement preceded by the following words.

⚠ WARNING “WARNING” indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

⚠ CAUTION “CAUTION” indicates a possibility of personal injury or equipment damage if instructions are not followed.


⚠ WARNING : EXHAUST PRECAUTIONS

- Never inhale exhaust gasses. They contain carbon monoxide, a colorless, odorless and extremely dangerous gas which can cause unconsciousness or death.
- Never operate the engine indoors or in a poorly ventilated area, such as a garage or carport, etc.
- Exercise extreme care when operating the engine near people or animals.
- Keep the exhaust pipe free of foreign objects.

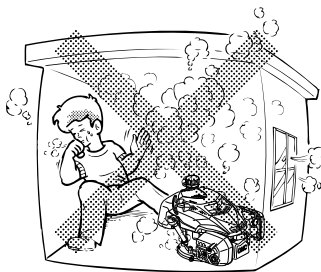


⚠ WARNING : REFUELING PRECAUTIONS

- Gasoline is extremely flammable and its vapors can explode if ignited.
- Do not refuel indoors or in a poorly ventilated area.
- Be sure to stop the engine prior to refueling.
- Do not remove fuel tank cap nor fill fuel tank while engine is hot or running. Allow engine to cool at least 2 minutes before refueling.
- Do not overfill the fuel tank.
- If fuel is spilt, wipe it away carefully and wait until the fuel has dried before starting the engine.
- After refueling, make sure that the fuel cap is secured to prevent spillage.

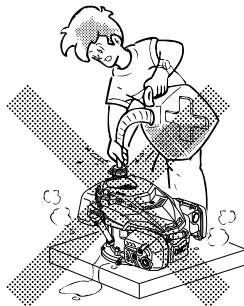


⚠ WARNING : FIRE PREVENTION

- Do not operate the engine while smoking or near an open flame.
- Do not use around dry brush, twigs, cloth rags, or other flammable materials.
- Keep cooling air intake (recoil starter area) and muffler side of the engine at least 1 meter away from buildings, obstructions and other burnable objects.
- Keep the engine away from flammables and other hazardous materials (trash, rags, lubricants, explosives).

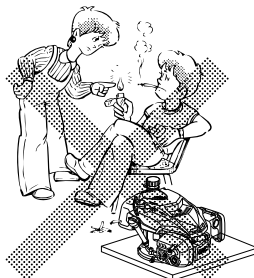

⚠ WARNING : OTHER SAFETY PRECAUTIONS


- Place the protective covers over the rotating parts. If rotating parts such as the drive shaft, pulley, belt, etc. are left exposed, they are potentially hazardous. To prevent injury, equip them with protective covers or shrouds.
- Be careful of hot parts. The muffler and other engine parts become very hot while the engine is running or just after it has stopped. Operate the engine in a safe area and keep children away from the running engine.
- Do not touch the spark plug and ignition cable when starting and operating the engine.
- Never make adjustments on the machinery while it is connected to the engine, without first removing the ignition cable from the spark plug. Turning the crankshaft by hand during adjusting or cleaning might start the engine, and cause serious injury to the operator.

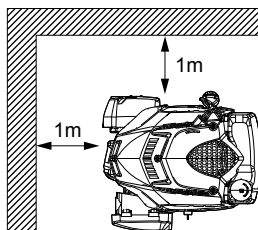

- Operate the engine on a stable, level surface. If the engine is tilted, fuel spillage may result.

NOTE : Operating the engine at a steep incline may cause seizure due to improper lubrication even with a maximum oil level.


- Do not transport the engine with fuel in tank or with fuel strainer valve open.
- Do not move the engine while in operation when it has been removed from the equipment.
- Keep the unit dry (do not operate it in rainy conditions).

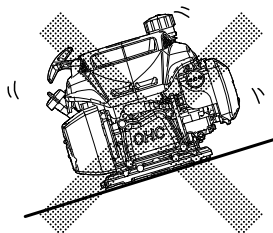

EN

⚠ CAUTION : PRE-OPERATION CHECKS

- Carefully check fuel hoses and joints for looseness and fuel leakage. Leaked fuel creates a potentially dangerous situation.
- Check bolts and nuts for looseness. A loose bolt or nut may cause serious engine trouble.
- Check the engine oil and refill if necessary.
- Check the fuel level and refill if necessary. Take care not to overfill the tank.
- Keep cylinder fins and recoil starter free of dirt, grass and other debris.
- Wear snug fitting working clothes when operating the engine. Loose aprons, towels, belt, etc., may be caught in the engine or drive train, causing a dangerous situation.

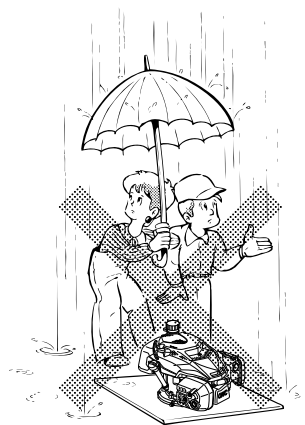


SYMBOLS


	Read manual.		Shut off fuel valve when the engine is not in use.
	Stay clear of the hot surface.		Check for leakage from hose and fittings.
	Exhaust gas is poisonous. Do not operate in an unventilated room or enclosed area.		Fire, open flame and smoking prohibited.
	Stop the engine before refueling.		HOT, avoid touching the hot area.
			Hot surface can burn you. Stay away if engine has been running.

	On (Run)		Engine start (Electric start)		Fuel (gasoline)		Primer
	Off (Stop)		Engine stop		Fuel system failure / malfunction		Push primer
	Engine oil		Add oil	3X	Three times		

2. COMPONENTS

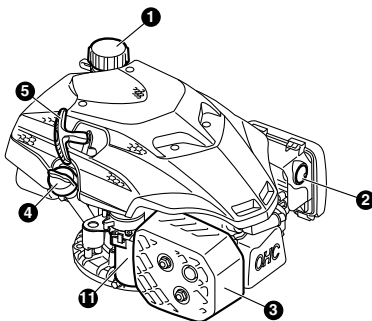

- ❶ FUEL TANK CAP
- ❷ PRIMER BULB
- ❸ MUFFLER
- ❹ OIL GAUGE
- ❺ STARTER HANDLE
- ❻ FUEL TANK

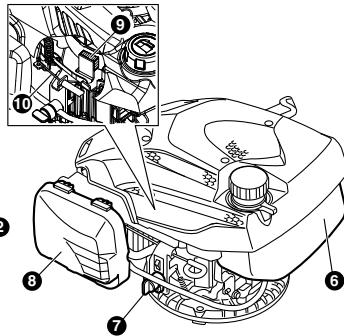

- ❷ FUEL VALVE
- ❸ AIR CLEANER
- ❹ BRAKE
- ❺ BRAKE WIRE
- ❻ ELECTRIC STARTER MOTOR (ELECTRIC STARTER MODELS)

3. PRE-OPERATION CHECKS

NOTE

Engine shipped from our factory is without oil. Before starting engine, fill with oil. Do not over-fill.



1. CHECK ENGINE OIL

Before checking or refilling engine oil, be sure the engine is located on stable, level surface and stopped.

- Do not screw the oil gauge into the oil filler neck to check oil level. If the oil level is low, refill to the upper level with the following recommended oil.
- Use 4-stroke automotive detergent oil of API service class SE or higher grade.
- Select the viscosity based on the air temperature at the time of operation as shown in the table.

Oil capacity (Upper level) :	L
MA1750.5
MA1900.6

- ❶ Oil Gauge
- ❷ Upper Level
- ❸ Lower Level

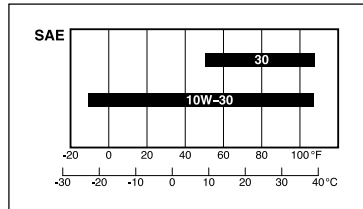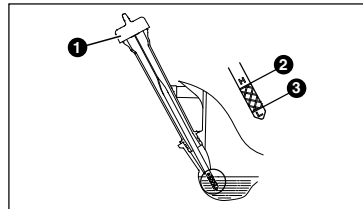

EN


2. CHECK FUEL

⚠ WARNING

- **Do not refuel while smoking, near an open flame or other such potential fire hazards. Otherwise fire accident may occur.**
- **Remove the static electricity from your body before refilling the gasoline. Sparking from electrostatic discharge may cause the ignition to the vaporized fuel (gasoline) resulting burns. Static electricity can be discharged from the body by touching by hand the metal parts of the unit and the fuel dispensing pump.**

- Stop the engine and open the cap.
- Use unleaded automotive gasoline only.
 - Unleaded regular/premium or reformulated gasoline containing no more than 10% Ethanol (E10), or 15% MTBE may also be used.
 - Never use gasoline containing ethanol exceeding 10%, or MTBE exceeding 15% because engine or fuel system damage could result.
 - Never use stale or contaminated gasoline.
 - Use of these non-recommended fuels may result in reduced performance and/or denial of warranty.

Fuel tank capacity :	L
MA175/MA190	0.85, 0.95, 1.2


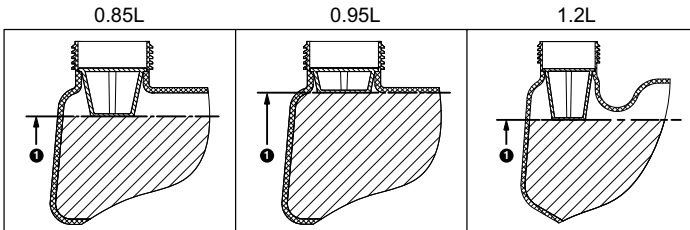

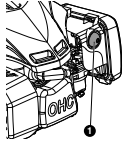


- ❶ Maximum Fuel Level
- Close the fuel valve before filling the fuel tank.
- Gasoline is extremely flammable and is explosive under certain conditions.
- Refuel in a well ventilated area with the engine stopped.
- Do not overfill the fuel tank (fuel volume should not exceed the bottom of the fuel level gauge). After filling, make sure the tank cap is secure.
- Wipe off any spilled fuel before starting the engine.

4. OPERATING

The engine's choking system varies based on the engine type.

Refer to the diagrams below to determine your engine type before you read 4.OPERATING section and other sections in the manual.

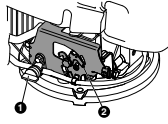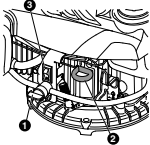
ENGINE TYPE	1	2	3	4
CHOKING SYSTEM	Cable choke control	Manual choke	Auto choke	Primer
				
	<ul style="list-style-type: none"> ❶ Fuel valve ❷ Throttle control lever 	<ul style="list-style-type: none"> ❶ Fuel valve ❷ Choke lever ❸ Engine stop switch 	<ul style="list-style-type: none"> ❶ Choke rod 	<ul style="list-style-type: none"> ❶ Primer bulb

EN

TYPE 1: Cable choke control


1. CHOKING

(1) Open the fuel valve. (position " I ")

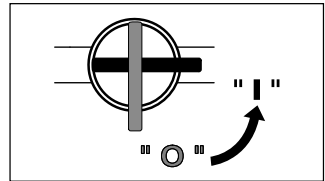

(2) Disengage the brake. (mower only)


- ❶ Disengage (Brake : OFF)
- ❷ Engage (Brake : ON)

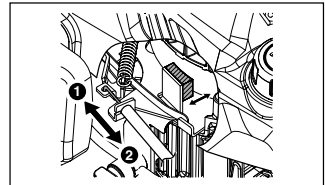

(3) Turn the throttle control lever to the CHOKE position ❶. (cold engine)

- ❶ STOP
- ❷ LOW
- ❸ HIGH
- ❹ CHOKE

■ When the engine is warm or when restarting the engine immediately after stopping it, start in HIGH position ❸.

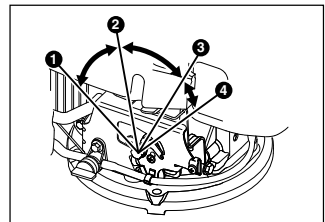


2. STARTING

Pull the starter handle slowly until resistance is felt. This is the "compression" point.

Return the handle to its original position and pull swiftly.

Do not pull the rope out all the way. After starting the engine, allow the starter handle to return to its original position while still holding the handle.

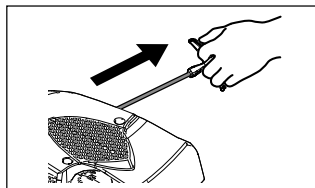

FOR ELECTRIC STARTER MODELS.

Insert the key into the key slot and set it at the "I" (ON) position. Turn it to the right (START position) to start the engine.

- Do not operate the electric starter continuously for more than 5 seconds, even if the engine does not start.
- If the engine failed to start, set the key to the "I" (ON) position and wait for about 10 seconds before retrying.
- Never turn the key switch to the START position while engine is running.


3. THROTTLE SETTING

(1) After the engine starts, move the throttle control lever to the HIGH position ③.

(2) Turn the throttle control lever for the required engine speed.

(Between ②~④)

- ① STOP
- ② LOW
- ③ HIGH
- ④ CHOKE

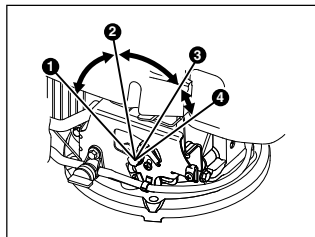


4. STOPPING

FOR MOWER


(1) Turn the throttle control lever to the LOW position ② and lessen the engine speed.

- ① STOP
- ② LOW
- ③ HIGH
- ④ CHOKE

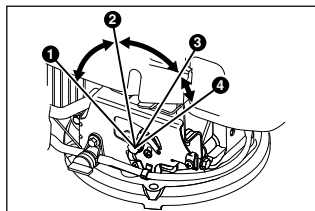

(2) Release the brake wire. (Brake : ON)

- ① Disengage (Brake : OFF)
- ② Engage (Brake : ON)

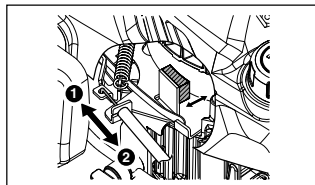


(3) Close the fuel valve. (position " O ")

※STOPPING ENGINE WITH THE FUEL VALVE

Close the fuel valve and wait for a while until the engine stops.


Avoid to let the fuel remain in the carburetor over long periods, or the passages of the carburetor may become clogged with impurities, and malfunctions may result.

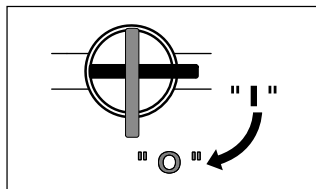

FOR OTHER APPLICATIONS

(1) Turn the throttle control lever to the STOP position ❶ and lessen the engine speed.


- ❶ STOP
- ❷ LOW
- ❸ HIGH
- ❹ CHOKE

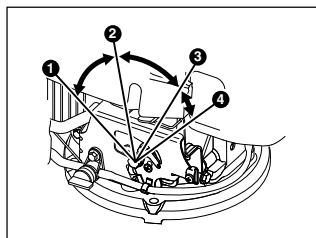

(2) Close the fuel valve. (position " O ")

FOR ELECTRIC STARTER MODELS.


Set the key switch to the OFF position.
(for details, refer to the equipped operating manual)

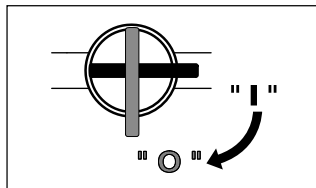


TYPE 2: Manual choke

1. CHOKING

(1) Open the fuel valve. (position " I ")

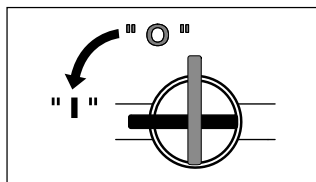


(2) Turn the engine stop switch " I " (ON).

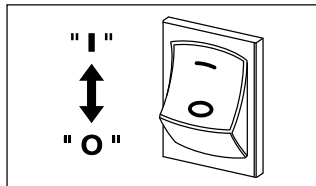

(3) Close the choke lever. (cold engine)


- If the engine is warm or the ambient temperature is high, open the choke lever half-way, or keep it fully open.

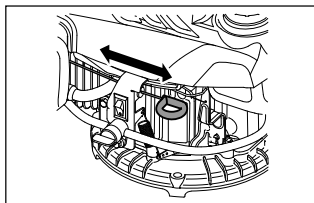

2. STARTING

Pull the starter handle slowly until resistance is felt. This is the "compression" point.

Return the handle to its original position and pull swiftly. Do not pull the rope out all the way. After starting the engine, allow the starter handle to return to its original position while still holding the handle.

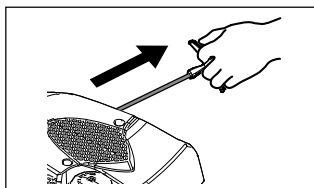

EN

FOR ELECTRIC STARTER MODELS.

Insert the key into the key slot and set it at the " I " (ON) position. Turn it to the right (START position) to start the engine.

- Do not operate the electric starter continuously for more than 5 seconds, even if the engine does not start.
- If the engine failed to start, set the key to the " I " (ON) position and wait for about 10 seconds before retrying.
- Never turn the key switch to the START position while engine is running.

3. THROTTLE SETTING


Let the engine warm up without using the machine (no load) for a couple of minutes.

The engine speed is adjusted at the factory to operate a specified speed.

Do not attempt to alter the speed as it may cause damage to the engine.

4. STOPPING

(1) Turn the engine stop switch to OFF (position " O ") to stop the engine.

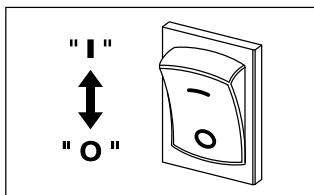

(2) Close the fuel valve. (position " O ")


FOR ELECTRIC STARTER MODELS.

Set the key switch to the OFF position.
(for details, refer to the equipped operating manual)

※STOPPING ENGINE WITH THE FUEL VALVE


Close the fuel valve and wait for a while until the engine stops.

Avoid to let the fuel remain in the carburetor over long periods, or the passages of the carburetor may become clogged with impurities, and malfunctions may result.

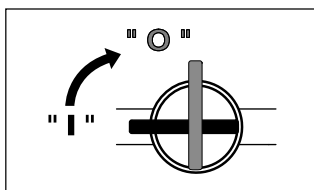


TYPE 3: Auto choke**1. CHOKING**

(1) Open the fuel valve. (position "I")

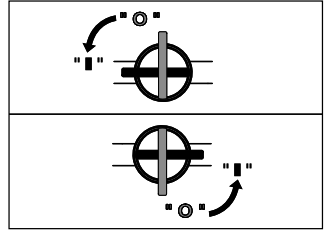


(2) Turn the engine stop switch ON. (position "I") (if equipped)

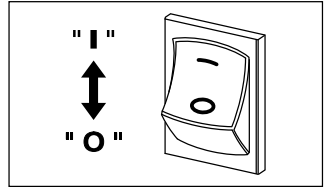


(3) Disengage the brake. (mower only)

- ❶ Disengage (Brake : OFF)
- ❷ Engage (Brake : ON)

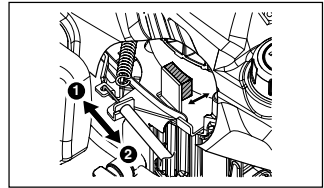**2. STARTING**

Pull the starter handle slowly until resistance is felt. This is the "compression" point.

Return the handle to its original position and pull swiftly. Do not pull the rope out all the way. After starting the engine, allow the starter handle to return to its original position while still holding the handle.

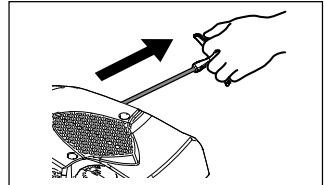**FOR ELECTRIC STARTER MODELS.**

Insert the key into the key slot and set it at the "I" (ON) position. Turn it to the right (START position) to start the engine.

- Do not operate the electric starter continuously for more than 5 seconds, even if the engine does not start.
- If the engine failed to start, set the key to the "I" (ON) position and wait for about 10 seconds before retrying.
- Never turn the key switch to the START position while engine is running.


3. THROTTLE SETTING

FOR VARIABLE ENGINE SPEED MODEL

(1) after the engine starts, move the throttle control lever to the HIGH position ③.

- ① STOP
- ② LOW
- ③ HIGH

(2) turn the throttle control lever for the required engine speed.
(Between ②~③)

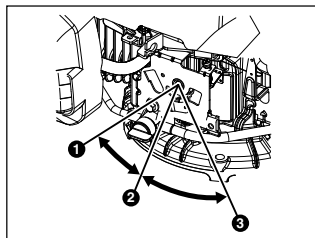

FOR FIXED ENGINE SPEED MODEL

Let the engine warm up without using the machine (no load) for a couple of minutes.

The engine speed is adjusted at the factory to operate a specified speed.


Do not attempt to alter the speed as it may cause damage to the engine.

4. STOPPING

FOR MOWER

(1) Release the brake wire. (Brake : ON)

- ① Disengage (Brake : OFF)
- ② Engage (Brake : ON)

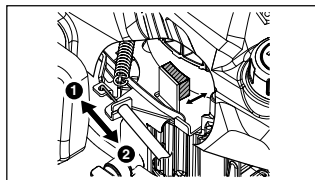


(2) Close the fuel valve. (position " O ")

※STOPPING ENGINE WITH THE FUEL VALVE


Close the fuel valve and wait for a while until the engine stops.

Avoid to let the fuel remain in the carburetor over long periods, or the passages of the carburetor may become clogged with impurities, and malfunctions may result.

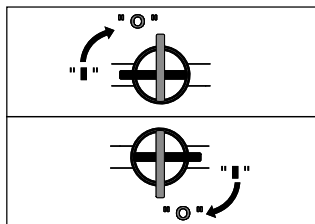


FOR WASHER

(1) Turn the engine stop switch to OFF (position " O ") to stop the engine.

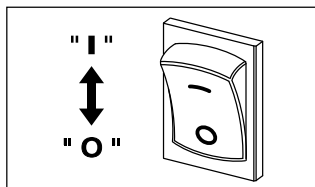


(2) Close the fuel valve. (position " O ")

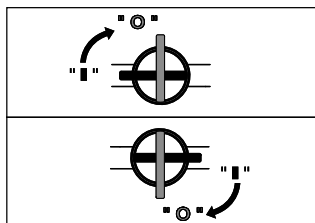

FOR OTHER APPLICATIONS

(1) Turn the throttle control lever to the STOP position ❶. (if equipped)
(for details, refer to the equipped operating manual)

- ❶ STOP
- ❷ LOW
- ❸ HIGH

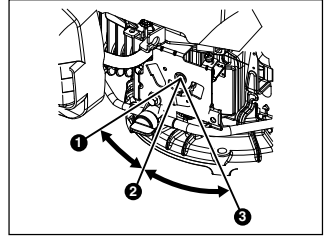

(2) Close the fuel valve. (position " O ")


FOR ELECTRIC STARTER MODELS.

Set the key switch to the OFF position.
(for details, refer to the equipped operating manual)

※STOPPING ENGINE WITH THE FUEL VALVE

Close the fuel valve and wait for a while until the engine stops.


Avoid to let the fuel remain in the carburetor over long periods, or the passages of the carburetor may become clogged with impurities, and malfunctions may result.

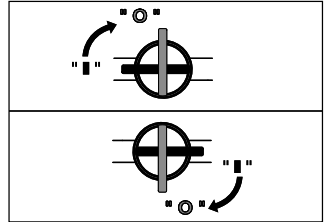


TYPE 4: Primer bulb

1. CHOKING

(1) Open the fuel valve. (position " I ")

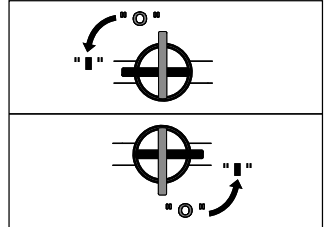


(2) Turn the engine stop switch ON. (position " I ") (if equipped)

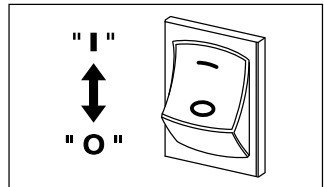

(3) Disengage the brake. (mower only)


- ❶ Disengage (Brake : OFF)
- ❷ Engage (Brake : ON)

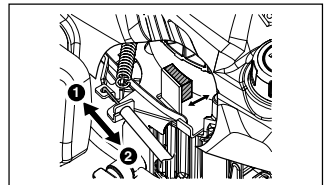

(4) Push primer bulb three times.

CAUTION

If the engine is already warm, do not push the primer bulb.

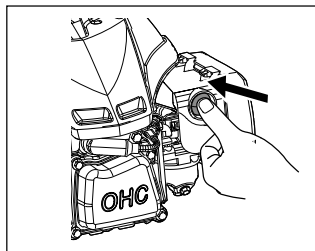


EN

2. STARTING

Pull the starter handle slowly until resistance is felt. This is the "compression" point.

Return the handle to its original position and pull swiftly. Do not pull the rope out all the way. After starting the engine, allow the starter handle to return to its original position while still holding the handle.

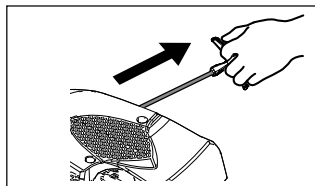

FOR ELECTRIC STARTER MODELS.

Insert the key into the key slot and set it at the "I" (ON) position. Turn it to the right (START position) to start the engine.

- Do not operate the electric starter continuously for more than 5 seconds, even if the engine does not start.
- If the engine failed to start, set the key to the "I" (ON) position and wait for about 10 seconds before retrying.
- Never turn the key switch to the START position while engine is running.

3. THROTTLE SETTING


FOR VARIABLE ENGINE SPEED MODEL

(1) After the engine starts, move the throttle control lever to the HIGH position ③.

(2) Turn the throttle control lever for the required engine speed.

(Between ② ~ ③)

- ① STOP
- ② LOW
- ③ HIGH

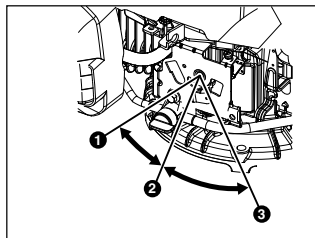

FOR FIXED ENGINE SPEED MODEL

Let the engine warm up without using the machine (no load) for a couple of minutes.

The engine speed is adjusted at the factory to operate a specified speed.


Do not attempt to alter the speed as it may cause damage to the engine.

4. STOPPING


FOR MOWER

(1) Release the brake wire. (Brake : ON)

- ① Disengage (Brake : OFF)
- ② Engage (Brake : ON)

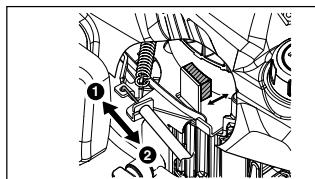


(2) Close the fuel valve. (position "O")

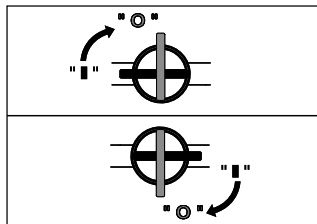


FOR WASHER

(1) Turn the engine stop switch to OFF (position "O") to stop the engine.

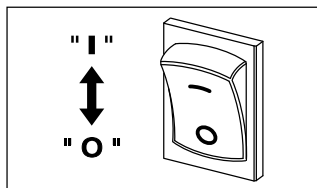


(2) Close the fuel valve. (position "O")

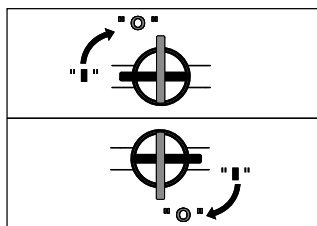

FOR OTHER APPLICATIONS

(1) Turn the throttle control lever to the STOP position ❶. (if equipped)
(for details, refer to the equipped operating manual)

- ❶ STOP
- ❷ LOW
- ❸ HIGH

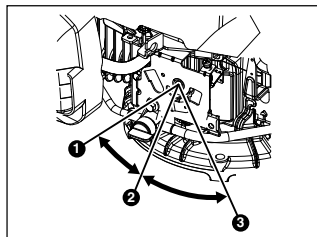

(2) Close the fuel valve. (position "O")


FOR ELECTRIC STARTER MODELS.

Set the key switch to the OFF position.
(for details, refer to the equipped operating manual)

※STOPPING ENGINE WITH THE FUEL VALVE

Close the fuel valve and wait for a while until the engine stops.

Avoid to let the fuel remain in the carburetor over long periods, or the passages of the carburetor may become clogged with impurities, and malfunctions may result.

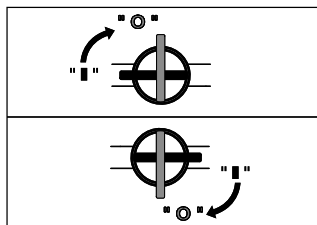


5. MAINTENANCE

1. DAILY INSPECTION

Before running the engine, check the following service items.

- ① Loose or broken bolts and nuts
- ② Clean air cleaner element
- ③ Enough clean engine oil
- ④ Leakage of gasoline and engine oil
- ⑤ Enough gasoline
- ⑥ Safe surroundings
- ⑦ Excessive vibration, noise

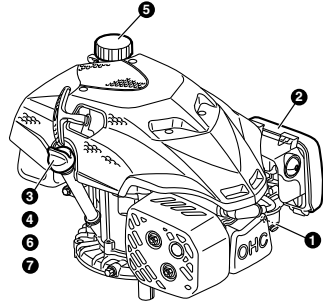

EN

2. PERIODIC INSPECTION


Periodic maintenance is vital to the safe and efficient operation of your engine.

Check the table below for periodic maintenance intervals.

Should the engine be operated in extremely dusty condition or in heavier loading condition, the maintenance intervals must be shortened depending on the contamination of oil, clogging of filter elements, wear of parts, and so on.

3. INSPECTING THE SPARK PLUG

- (1) Clean off carbon deposits on the spark plug electrode using a plug cleaner or wire brush.
- (2) Check electrode gap. The gap should be 0.6 mm to 0.7 mm (0.02 inch.-0.03 inch.).
Adjust the gap, if necessary, by carefully bending the side electrode.

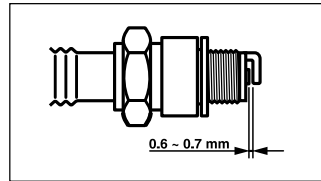

Recommended Spark Plug

E7RTC (TORCH)

4. ENGINE OIL CHANGE

Initial oil change : After 20 hours of operation


Thereafter : Every 50 hours of operation

⚠ CAUTION


To prevent injury, pay attention to the hot oil.

- (1) When changing oil, stop the engine and loosen the drain plug. Drain the used oil while the engine is warm.

Warm oil drains quickly and completely. (For MA190 and Option MA175)

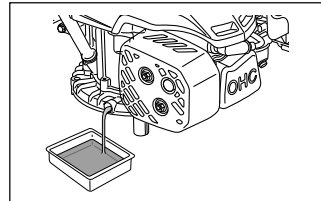


- (2) When changing oil, stop the engine and remove the oil gauge. Drain the used oil by inclining the engine. (For MA175)

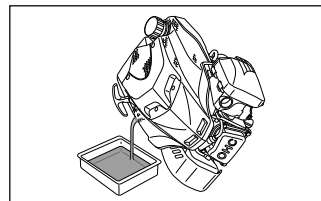

(3) Re-install the drain plug before refilling oil.

Oil capacity (Upper level) :	L
MA175	0.5
MA190	0.6

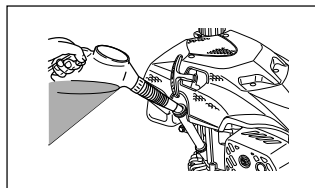

(4) Refer to page 5 for the recommended oil.

- Always use the best grade and clean oil. Contaminated oil, poor quality oil and shortage of oil cause damage to engine or shorten the engine life.

EN

Periodic Maintenance Schedule table

Maintenance Items	Every 8 hours (Daily)	Every 50 hours (Season)	Every 100 hours (Annually)
Clean engine and check bolts and nuts	● (Daily)		
Check for leakage from hoses and fitting	● (Daily)		
Check and refill engine oil	● (Refill daily up to upper level)		
Change engine oil	● (Initial 20 hours)	●	
Clean spark plug		●	
Clean air cleaner		●	
Clean spark arrester (Optional part)			●
Replace air cleaner element			●
Clean and adjust spark plug and electrodes			●
Replace spark plug			●
Check and adjust valve clearance			●
Remove carbon from cylinder head			●
Clean and adjust carburetor			●
Check fuel lines			●
Replace fuel lines			● (Every 2 years)

5. CLEANING AIR CLEANER

A dirty air cleaner element will cause starting difficulty, power loss, engine malfunctions, and shorten engine life extremely. Always keep the air cleaner element clean.

⚠ WARNING Flame Prohibited


⚠ CAUTION
Never run the engine without an air cleaner, severe wear of the engine may occur.

A. Paper Element Type

Clean the element by blowing on it with compressed air from the inside or tapping on it gently to remove dirt.

Change the paper element when doing this fails to remove the dirt.


- 1 Paper Element

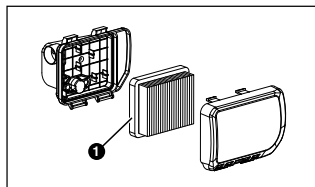

B. Urethane Foam Element Type

Remove the element and wash it in a solution of mild detergent and warm water. Then rinse the element thoroughly in clean water. Allow the element to dry thoroughly. Apply a tablespoon (6cc) of motor oil to the clean and dry foam element and squeeze the element several times to distribute the oil evenly throughout the foam. Then squeeze the foam element in a paper towel to absorb any excess oil.


- ① Urethane Foam Element

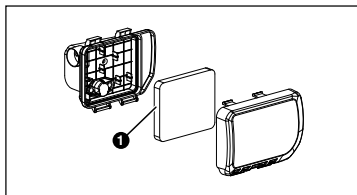

C. Dual Element Type

- For urethane foam, remove it from the paper element and wash it thoroughly with detergent. Then dry it before installing.
- For the paper element, clean by blowing on it with compressed air from the inside or tapping on it gently to remove dirt. Change the paper element when doing this fails to remove the dirt.

- ① Paper Element
- ② Urethane Foam Element

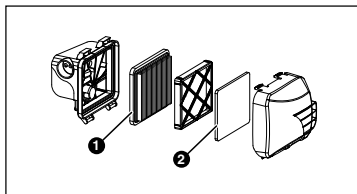

EN

NOTE :

Clean and replace air cleaner elements more often when operating in dusty environments. Replace the element in case that dirt or dust can not be removed and/or that the element is deformed or deteriorated.


6. BLADE INSPECTION (MOWER ONLY)

In case of blade inspection, drain fuel and oil before maintenance.
if these process do not skip, it may case trouble.

7. FUEL HOSE REPLACEMENT

⚠ WARNING

- Take extreme caution when replacing fuel hose ; gasoline is extremely flammable.
- Remove the static electricity from your body before refilling the gasoline.
Sparking from electrostatic discharge may cause the ignition to the vaporized fuel (gasoline) resulting burns.
Static electricity can be discharged from the body by touching by hand the metal parts of the unit.

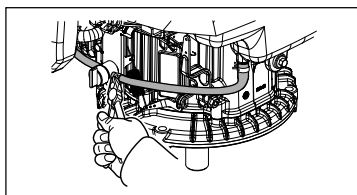

Replace the fuel hose every 2 years.

If fuel leaks from fuel hose, replace the fuel hose immediately.

8. CHECKING BOLTS, NUTS AND SCREWS

- Retighten loose bolts and nuts.
- Check for fuel and oil leaks.
- Replace damaged parts with new ones.

6. PREPARATIONS FOR STORAGE

1. DISCHARGE FUEL

⚠ WARNING

- Use extreme caution when handling fuel. Gasoline is extremely flammable.
- Remove the static electricity from your body before refilling the gasoline. Sparking from electrostatic discharge may cause the ignition to the vaporized fuel (gasoline) resulting burns. Static electricity can be discharged from the body by touching by hand the metal parts of the unit.
- Always store/carry the fuel (gasoline) with metallic portable tank to prevent fire.

If you do not use the engine more than 1 month, discharge fuel to prevent gum in the fuel system and carburetor parts.

- Open the fuel shut-off valve (if equipped)
- Remove the drain screw of the carburetor float chamber and discharge fuel into a suitable container (do not use glass or styrofoam).

2. ENGINE OIL

- Change the engine oil with fresh oil, See Periodic Maintenance Schedule table.
- Remove the spark plug, pour about 1 tsp. (5cc) of engine oil into the cylinder. Slowly pull the starter handle of the recoil starter 2 or 3 times, and replace the spark plug.

3. CLEAN AND STORE

- Slowly pull the recoil starter handle until resistance is felt and leave it in that position to keep moisture out of the combustion chamber.
- Clean the engine thoroughly with a cloth, and store the engine indoors in a well ventilated, low humidity area.

7. SPARK ARRESTER (OPTIONAL)

In a dry or wooded area, it is recommendable to use the engine with a spark arrester. Some areas require the use of a spark arrester. Please check your local laws and regulations before operating your engine.

The spark arrester must be cleaned regularly to keep it functioning as designed. A clogged spark arrester:

- Prevents the flow of exhaust gas
- Reduces engine output
- Increases fuel consumption
- Makes starting difficult

⚠ CAUTION

If the engine has been running, the muffler and the spark arrester will be very hot. Allow the muffler to cool before cleaning the spark arrester.

How to remove the spark arrester

1. Remove the flange bolts from the muffler cover and remove the muffler cover.
2. Remove the special screw from the spark arrester and remove the spark arrester from the muffler.

- ① Spark arrester screen
- ② Screw
- ③ Muffler cover

Clean the spark arrester screen



Use a brush to remove carbon deposits from the spark arrester screen.

Be careful to avoid damaging the screen.

The spark arrester must be free of breaks and holes.

Replace the spark arrester if it is damaged.

Install the spark arrester, and muffler cover in the reverse order of disassembly.

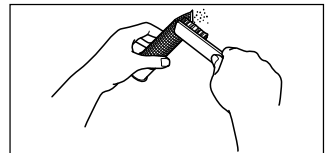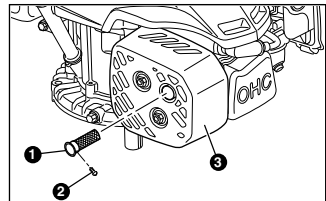

8. EASY TROUBLESHOOTING

WHEN ENGINE WILL NOT START :

Perform the following checks before you take the engine to a YAMAHA dealer.
If you still have trouble after completing the checks, take the engine to your nearest YAMAHA dealer.

1. Is there a strong spark across the electrode ?

(1) • **Brake Type**

Please confirm that brake do not operate.

• **Stop switch Type**

is the stop switch at the position " | " (ON)?

(2) Remove and inspect the spark plug.

If the electrode is fouled, clean or replace it with new one.

(3) Remove the spark plug and connect it to the plug cap.

Pull the starter handle while grounding spark plug against engine body.

Try with a new spark plug if the spark is weak or there is no spark.

The ignition system is faulty if there is no spark with a new spark plug.

EN

WARNING

- **Wipe out spilled fuel carefully before testing.**
- **Place spark plug as far away from spark plug hole as possible.**
- **Do not hold spark plug by hand while pulling recoil starter.**

2. Is there enough compression?

Pull the starter handle slowly and check if resistance is felt. If little force is required to pull the starter handle, check if the spark plug is tightened firmly.

If the spark plug is loose, tighten it.

3. Is the spark plug wet with gasoline?

(1) Is the fuel valve opened?

(2) • **Primer Type**

Push primer bulb three times and pull the starter handle five or six times.

Remove the plug and check if its electrode is wet. If the electrode is wet, fuel is well supplied to your engine.

• **Choke Type**

Choke (close choke lever) and pull the starter handle five or six times.

Remove the plug and check if its electrode is wet.

If the electrode is wet, fuel is well supplied to your engine.

(3) When the electrode is dry, check where the fuel stops. (Check the fuel intake of the carburetor.)

(4) In case the engine does not start with well supplied fuel, try using fresh fuel.

9. SPECIFICATIONS

MODEL		MA175	MA190
Type		Air-cooled, 4-cycle single cylinder, overhead camshaft, gasoline engine	
Displacement	mL	174	190
Direction of Rotation		Counterclockwise as viewed from the P.T.O.	
Lubricant		Automotive detergent oil (API/ SE or higher grade, SAE/ 10W-30 etc.)	
Oil Capacity	L	0.5	0.6
Fuel		Automotive Gasoline (Unleaded)	
Fuel Tank Capacity	L	0.85, 0.95, 1.2	
Spark Plug		TORCH E7RTC	
Starting System		Recoil starter / Electric starter	
Dry Weight	kg	13.0	13.5
Dimensions (L x W x H)	mm	397 x 350 x 268	423 x 350 x 288

• Specifications are subject to change without notice

EN

(EN) [appendix]

Instructions for treatment as waste

When disposing this product ,make sure that the fuel and oil should be drained from the engine ,and submit to local regulations.

(FR) [Annexe]

Instructions pour le traitement des déchets

Quand ce produit doit être mis au rebut, s'assurer que le carburant et l'huile ont été vidangés correctement à partir du moteur, et que les règlements locaux sont bien observés.

(DE) [Anhang]

Anweisungen für die Behandlung als Abfall

Bei der Entsorgung dieses Produkts sicherstellen, dass der Kraftstoff und das Öl aus dem Motor abgelassen wird und unter Befolgung aller örtlich gültigen Bestimmungen entsorgt wird.

(ES) [anexo]

Instrucciones para el tratamiento de los residuos

Cuando este producto debe ponerse al rechazo, asegurarse de que el combustible y el aceite se purgaron correctamente a partir del motor, y que se observan bien los reglamentos locales.

(IT) [appendix]

Istruzioni per lo smaltimento

Per lo smaltimento di questo prodotto, assicurarsi di aspirare il carburante e l'olio dal motore, in conformità con le regolamentazioni locali.

(PT) [apêndice]

Instruções para tratamento como resíduo

Quando eliminar este produto, assegure-se de que o combustível e o óleo são escoados do motor e sujeitos às regulamentações locais.

(GR) [Προσάρτημα]

Οδηγίες για επεξεργασία ως απόβλητα

Όταν απορρίπτετε αυτό το προϊόν, βεβαιωθείτε ότι τα καύσιμα και τα λιπαντικά έχουν αδειάσει από τη μηχανή και τηρήστε τους τοπικούς κανονισμούς.

(RU) [приложение]

Инструкции по обращению с отходами

При утилизации данного продукта следите за тем, чтобы топливо и масло были слиты из двигателя и утилизированы в соответствии с местными нормами.

(CN) [附录]

废弃处理说明

在处置本品时，务必将发动机中的燃油和机油排空，同时应遵守当地法规。

LIT-19626-02-58



PRINTED IN CHINA
2017 • 12 × 1 